



S-YXG50

データリスト



目次

ノーマルボイス

XGボイス	2
GS ボイス	18
GM Level 2 ボイス	26

ドラムボイス

XGドラムボイス	28
GSドラムボイス	30
GM Level 2 ドラムボイス	32


エフェクトタイプリスト	33
-------------------	----

MIDIインプリメンテーションチャート	34
---------------------------	----

ノーマルボイス (XGボイス)

Bank Select MSB=000,
LSB=バンクナンバー

Instrument Group	Pgm #	Bank 0	KSP		Stereo		Single		Slow		Fast Decay	
			EL	Bank 1	EL	Bank 3	EL	Bank 6	EL	Bank 8	EL	Bank 12
Piano	1	GrandPno	1	GrndPnoK	1							
	2	BritePno	1	BritPnoK	1							
	3	E.Grand	2	ElGrPnoK	2							
	4	HnkyTonk	2	HnkyTnkK	2							
	5	E.Piano1	2	El.Pno1K	1							
	6	E.Piano2	2	El.Pno2K	1							
	7	Harpsi.	1	Harpsi.K	1							
	8	Clavi.	2	Clavi.K	1							
Chromatic Percussion	9	Celesta	1									
	10	Glocken	1									
	11	MusicBox	2									
	12	Vibes	1	VibesK	1							
	13	Marimba	1	MarimbaK	1							
	14	Xylophon	1									
	15	TubulBel	1									
	16	Dulcimer	1									
Organ	17	DrawOrgn	1									
	18	PercOrgn	1									
	19	RockOrgn	2									
	20	ChrchOrg	2									
	21	ReedOrgn	1									
	22	Acordion	2									
	23	Harmnica	1									
	24	TangoAcd	2									
Guitar	25	NylonGtr	1									
	26	SteelGtr	1									
	27	Jazz Gtr	1									
	28	CleanGtr	1									
	29	Mute.Gtr	1									
	30	Ovrdrive	1									
	31	Dist.Gtr	1									
	32	GtrHarmo	1									
Bass	33	Aco.Bass	1									
	34	FngrBass	1									
	35	PickBass	1									
	36	Fretless	1									
	37	SlapBas1	1									
	38	SlapBas2	1									
	39	SynBass1	1									
	40	SynBass2	2					MelloSB1	1		Seq Bass	2
Strings	41	Violin	1							SlowVln	1	
	42	Viola	1									
	43	Cello	1									
	44	Contrabs	1									
	45	Trem.Str	1							SlowTrStr	1	
	46	Pizz.Str	1									
	47	Harp	1									
	48	Timpani	1									
Ensemble	49	Strings1	1			S.Strngs	2			Slow Str	1	
	50	Strings2	1			S.SlwStr	2			LegatoSt	2	
	51	Syn.Str1	2									
	52	Syn.Str2	2									
	53	ChoirAah	1			S.Choir	2					
	54	VoiceOoh	1									
	55	SynVoice	1									
	56	Orch.Hit	2									
Brass	57	Trumpet	1									
	58	Trombone	1									
	59	Tuba	1									
	60	Mute.Trp	1									
	61	Fr.Horn	2					FrHrSolo	2			
	62	BrasSect	1									
	63	SynBras1	2								QuackBr	2
	64	SynBras2	1									

 Bank 0と同じ音色が入っています。

Bank Select MSB=000,
LSB=バンクナンバー

Instrument Group	Pgm #	Double Attack		Bright		Dark		Rsonant		Attack							
		Bank 0	EL	Bank 14	EL	Bank 16	EL	Bank 17	EL	Bank 18	EL	Bank 19	EL	Bank 20	EL	Bank 24	EL
Piano	1	GrandPno	1							MelloGrP	1						
	2	BritePno	1														
	3	E.Grand	2														
	4	HnkyTonk	2														
	5	E.Piano1	2							MelloEP1	2						
	6	E.Piano2	2														
	7	Harpsi.	1														
	8	Clavi.	2														
Chromatic Percussion	9	Celesta	1														
	10	Glocken	1														
	11	MusicBox	2														
	12	Vibes	1														
	13	Marimba	1														
	14	Xylophon	1														
	15	TubuBel	1														
	16	Dulcimer	1														
Organ	17	DrawOrgn	1														
	18	PercOrgn	1													70sPcOr1	2
	19	RockOrgn	2														
	20	ChrchOrg	2														
	21	ReedOrgn	1														
	22	Acordion	2														
	23	Harmnica	1														
	24	TangoAcid	2														
Guitar	25	NylonGtr	1			NylonGt2	1										
	26	SteelGtr	1			SteelGt2	1										
	27	Jazz Gtr	1							MelloGtr	1						
	28	CleanGtr	1														
	29	Mute.Gtr	1														
	30	Ovrdrive	1														
	31	Dist.Gtr	1														
	32	GtrHarmo	1														
Bass	33	Aco.Bass	1														
	34	FngrBass	1							FngrDrk	2						
	35	PickBass	1														
	36	Fretless	1														
	37	SlapBas1	1														
	38	SlapBas2	1														
	39	SynBass1	1							SynBa1Dk	1		FastResB	1	AcidBass	1	
	40	SynBass2	2							ClkSynBa	2	SynBa2Dk	1				
Strings	41	Violin	1														
	42	Viola	1														
	43	Cello	1														
	44	Contrabs	1														
	45	Trem.Str	1														
	46	Pizz.Str	1														
	47	Harp	1														
	48	Timpani	1														
Ensemble	49	Strings1	1													ArcoStr	2
	50	Strings2	1														
	51	Syn.Str1	2														
	52	Syn.Str2	2														
	53	ChoirAah	1			Ch.Aahs2	2										
	54	VoiceOoh	1														
	55	SynVoice	1														
	56	Orch.Hit	2														
Brass	57	Trumpet	1			Trumpet2	1	BriteTrp	2								
	58	Trombone	1							Trmbone2	2						
	59	Tuba	1			Tuba 2	1										
	60	Mute.Trp	1														
	61	Fr.Horn	2														
	62	BrasSect	1														
	63	SynBras1	2										RezSynBr	2	PolyBrss	2	
	64	SynBras2	1							Soft Brs	2						

Bank 0と同じ音色が入っています。

ノーマルボイス (XGボイス)

Bank Select MSB=000,
LSB=バンクナンバー

Instrument Group	Pgm #	KSP		Stereo		Single		Slow		Fast Decay			
		Bank 0	EL	Bank 1	EL	Bank 3	EL	Bank 6	EL	Bank 8	EL	Bank 12	EL
Reed	65	SprnoSax	1										
	66	Alto Sax	1										
	67	TenorSax	1										
	68	Bari.Sax	1										
	69	Oboe	2										
	70	Eng.Horn	1										
	71	Bassoon	1										
	72	Clarinet	1										
Pipe	73	Piccolo	1										
	74	Flute	1										
	75	Recorder	1										
	76	PanFlute	1										
	77	Bottle	2										
	78	Shakhchi	2										
	79	Whistle	1										
	80	Ocarina	1										
Synth Lead	81	SquareLd	2					Square 2	1	LMSquare	2		
	82	Saw.Lead	2					Saw 2	1	ThickSaw	2		
	83	CaliopLd	2										
	84	Chiff Ld	2										
	85	CharanLd	2										
	86	Voice Ld	2										
	87	Fifth Ld	2										
	88	Bass &Ld	2										
Synth Pad	89	NewAgePd	2										
	90	Warm Pad	2										
	91	PolySyPd	2										
	92	ChoirPad	2										
	93	BowedPad	2										
	94	MetalPad	2										
	95	Halo Pad	2										
	96	SweepPad	2										
Synth Effects	97	Rain	2										
	98	SoundTrk	2										
	99	Crystal	2									SynDrCmp	2
	100	Atmosphr	2										
	101	Bright	2										
	102	Goblins	2										
	103	Echoes	2									EchoPad2	2
	104	Sci-Fi	2										
Ethnic	105	Sitar	1										
	106	Banjo	1										
	107	Shamisen	1										
	108	Koto	1										
	109	Kalimba	1										
	110	Bagpipe	2										
	111	Fiddle	1										
	112	Shanai	1										
Percussive	113	TnklBell	2										
	114	Agogo	2										
	115	SteelDrm	2										
	116	WoodBlok	1										
	117	TaikoDrm	1										
	118	MelodTom	2										
	119	Syn.Drum	1										
	120	RevCymb	1										
Sound Effects	121	FretNoiz	2										
	122	BrthNoiz	2										
	123	Seashore	2										
	124	Tweet	2										
	125	Telephone	1										
	126	Helicptr	1										
	127	Applause	1										
	128	Gunshot	1										

Bank 0と同じ音色が入っています。

Bank Select MSB=000,
LSB=バンクナンバー


Instrument Group	Pgm #	Double Attack		Bright		Dark		Rsonant		Attack							
		Bank 0	EL	Bank 14	EL	Bank 16	EL	Bank 17	EL	Bank 18	EL	Bank 19	EL	Bank 20	EL	Bank 24	EL
Reed	65	SprnoSax	1														
	66	Alto Sax	1														
	67	TenorSax	1														
	68	Bari.Sax	1														
	69	Oboe	2														
	70	Eng.Horn	1														
	71	Bassoon	1														
	72	Clarinet	1														
Pipe	73	Piccolo	1														
	74	Flute	1														
	75	Recorder	1														
	76	PanFlute	1														
	77	Bottle	2														
	78	Shakhchi	2														
	79	Whistle	1														
	80	Ocarina	1														
Synth Lead	81	SquareLd	2						Hollow	1	Shmoog	2					
	82	Saw.Lead	2						DynaSaw	1	DigiSaw	2	Big Lead	2	HeavySyn	2	
	83	CaliopLd	2														
	84	Chiff Ld	2														
	85	CharanLd	2														
	86	Voice Ld	2												SynthAah	2	
	87	Fifth Ld	2														
	88	Bass &Ld	2			Big&Low	2										
Synth Pad	89	NewAgePd	2														
	90	Warm Pad	2			ThickPad	2	Soft Pad	2	SinePad	2						
	91	PolySyPd	2														
	92	ChoirPad	2														
	93	BowedPad	2														
	94	MetalPad	2														
	95	Halo Pad	2														
	96	SweepPad	2										Shwimmer	2			
Synth Effects	97	Rain	2														
	98	SoundTrk	2														
	99	Crystal	2	Popcorn	2				TinyBell	2							
	100	Atmosphr	2						WarmAtms	2	HollwRls	2					
	101	Bright	2														
	102	Goblins	2														
	103	Echoes	2	Echo Pan	2												
	104	Sci-Fi	2														
Ethnic	105	Sitar	1														
	106	Banjo	1														
	107	Shamisen	1														
	108	Koto	1														
	109	Kalimba	1														
	110	Bagpipe	2														
	111	Fiddle	1														
	112	Shanai	1														
Percussive	113	TnkIBell	2														
	114	Agogo	2														
	115	SteelDrm	2														
	116	WoodBlok	1														
	117	TaikoDrm	1														
	118	MelodTom	2														
	119	Syn.Drum	1														
	120	RevCymb1	1														
Sound Effects	121	FretNoiz	2														
	122	BrthNoiz	2														
	123	Seashore	2														
	124	Tweet	2														
	125	Telephone	1														
	126	Helicptr	1														
	127	Applause	1														
	128	Gunshot	1														

Bank 0と同じ音色が入っています。

ノーマルボイス (XGボイス)


Bank Select MSB=000,
LSB=バンクナンバー

Instrument Group	Pgm #	Bank 0	EL	Release		Rezo Sweep		Muted		Detune 1		Detune 2	
				Bank 25	EL	Bank 27	EL	Bank 28	EL	Bank 32	EL	Bank 33	EL
Piano	1	GrandPno	1										
	2	BritePno	1										
	3	E.Grand	2							Det.CP80	2		
	4	HnkyTonk	2										
	5	E.Piano1	2							Chor.EP1	2		
	6	E.Piano2	2							Chor.EP2	2	DX Hard	2
	7	Harpsi.	1	Harpsi.2	2								
	8	Clavi.	2			ClaviWah	2						
Chromatic Percussion	9	Celesta	1										
	10	Glocken	1										
	11	MusicBox	2										
	12	Vibes	1										
	13	Marimba	1										
	14	Xylophon	1										
	15	TubulBel	1										
	16	Dulcimer	1										
Organ	17	DrawOrgn	1							DetDrwOr	2	60sDrOr1	2
	18	PercOrgn	1							DetPrcOr	2	LiteOrg	2
	19	RockOrgn	2										
	20	ChrchOrg	2							ChurOrg3	2		
	21	ReedOrgn	1										
	22	Accordion	2							Accordit	2		
	23	Harmnica	1							Harmo 2	2		
	24	TangoAcid	2										
Guitar	25	NylonGtr	1	NylonGt3	2								
	26	SteelGtr	1										
	27	Jazz Gtr	1							JazzAmp	2		
	28	CleanGtr	1							ChorusGt	2		
	29	Mute.Gtr	1										
	30	Ovrdrive	1										
	31	Dist.Gtr	1										
	32	GtrHarmo	1										
Bass	33	Aco.Bass	1										
	34	FngrBass	1			FlangeBa	2						
	35	PickBass	1					MutePkBa	1				
	36	Fretless	1							Fretles2	2	Fretles3	2
	37	SlapBas1	1			ResoSlap	1			PunchThm	2		
	38	SlapBas2	1										
	39	SynBass1	1										
	40	SynBass2	2							SmthBa 2	2		
Strings	41	Violin	1										
	42	Viola	1										
	43	Cello	1										
	44	Contrabs	1										
	45	Trem.Str	1										
	46	Pizz.Str	1										
	47	Harp	1										
	48	Timpani	1										
Ensemble	49	Strings1	1										
	50	Strings2	1										
	51	Syn.Str1	2			ResoStr	2						
	52	Syn.Str2	2										
	53	ChoirAah	1							MelChoir	2		
	54	VoiceOoh	1										
	55	SynVoice	1										
	56	Orch.Hit	2										
Brass	57	Trumpet	1							WarmTrp	2		
	58	Trombone	1										
	59	Tuba	1										
	60	Mute.Trp	1										
	61	Fr.Horn	2							FrHorn2	1		
	62	BrasSect	1										
	63	SynBras1	2			SynBras3	2			JumpBrss	2		
	64	SynBras2	1										

 Bank 0と同じ音色が入っています。

Bank Select MSB=000,
LSB=バンクナンバー


Instrument Group	Pgm #	Bank 0		Detune 3		Bank 34		Octave 1		Bank 35		Octave 2		Bank 36		5th 1		Bank 37		5th 2		Bank 38		Bend		Bank 39		Tutti		Bank 40	
		EL		EL		EL		EL		EL		EL		EL		EL		EL		EL		EL		EL		EL		EL			
Piano	1	GrandPno	1																									PianoStr	2		
	2	BritePno	1																												
	3	E.Grand	2																									EIGrPno1	2		
	4	HnkyTonk	2																												
	5	E.Piano1	2																									HardEl.P	2		
	6	E.Piano2	2	DXLegend	2																							DX Phase	2		
	7	Harpsi.	1			Harpsi.3	2																								
	8	Clavi.	2																												
Chromatic Percussion	9	Celesta	1																												
	10	Glocken	1																												
	11	MusicBox	2																												
	12	Vibes	1																												
	13	Marimba	1																												
	14	Xylophon	1																												
	15	TubulBel	1																												
	16	Dulcimer	1			Dulcimr2	2																								
Organ	17	DrawOrgn	1	60sDrOr2	2	70sDrOr1	2	DrawOrg2	2	60sDrOr3	2	EvenBar	2														16+2*2/3	2			
	18	PercOrgn	1							PercOrg2	2																				
	19	RockOrgn	2																												
	20	ChrchOrg	2			ChurOrg2	2																					NotreDam	2		
	21	ReedOrgn	1																									Puff Org	2		
	22	Acordion	2																												
	23	Harmnica	1																												
	24	TangoAcid	2																												
Guitar	25	NylonGtr	1																												
	26	SteelGtr	1			12StrGtr	2																				Nyln&Stl	2			
	27	Jazz Gtr	1																												
	28	CleanGtr	1																												
	29	Mute.Gtr	1																									FunkGtr1	2		
	30	Ovrdrive	1																												
	31	Dist.Gtr	1																									FeedbkGt	2		
	32	GtrHarmo	1																												
Bass	33	Aco.Bass	1																								JazzRthm	2			
	34	FngrBass	1																								Ba&DstEG	2			
	35	PickBass	1																												
	36	Fretless	1	Fretles4	2																										
	37	SlapBas1	1																												
	38	SlapBas2	1																												
	39	SynBass1	1			Clv Bass	2																				TeknoBa	2			
	40	SynBass2	2																								ModulrBa	2			
Strings	41	Violin	1																												
	42	Viola	1																												
	43	Cello	1																												
	44	Contrabs	1																												
	45	Trem.Str	1																								Susp Str	2			
	46	Pizz.Str	1																												
	47	Harp	1																								YangChin	2			
	48	Timpani	1																												
Ensemble	49	Strings1	1			60sStrng	2																				Orchestr	2			
	50	Strings2	1																								Warm Str	2			
	51	Syn.Str1	2																												
	52	Syn.Str2	2																												
	53	ChoirAah	1																								ChoirStr	2			
	54	VoiceOoh	1																												
	55	SynVoice	1																								SynVox2	2			
	56	Orch.Hit	2			OrchHit2	2																								
Brass	57	Trumpet	1																												
	58	Trombone	1																												
	59	Tuba	1																												
	60	Mute.Trp	1																												
	61	Fr.Horn	2												HornOrch	2															
	62	BrasSect	1			Tp&TbSec	2																				BrssSec2	2			
	63	SynBras1	2																												
	64	SynBras2	1																								SynBras4	2			

 Bank 0と同じ音色が入っています。

ノーマルボイス (XGボイス)

Bank Select MSB=000,
LSB=バンクナンバー

Instrument Group	Pgm #	Bank 0	EL	Release		Rezo Sweep		Muted		Detune 1		Detune 2	
				Bank 25	EL	Bank 27	EL	Bank 28	EL	Bank 32	EL	Bank 33	EL
Reed	65	SprnoSax	1										
	66	Alto Sax	1										
	67	TenorSax	1										
	68	Bari.Sax	1										
	69	Oboe	2										
	70	Eng.Horn	1										
	71	Bassoon	1										
	72	Clarinet	1										
Pipe	73	Piccolo	1										
	74	Flute	1										
	75	Recorder	1										
	76	PanFlute	1										
	77	Bottle	2										
	78	Shakhchi	2										
	79	Whistle	1										
	80	Ocarina	1										
Synth Lead	81	SquareLd	2										
	82	Saw.Lead	2	WaspySyn	2								
	83	CaliopLd	2										
	84	Chiff Ld	2										
	85	CharanLd	2										
	86	Voice Ld	2										
	87	Fifth Ld	2										
	88	Bass &Ld	2										
Synth Pad	89	NewAgePd	2										
	90	Warm Pad	2										
	91	PolySyPd	2										
	92	ChoirPad	2										
	93	BowedPad	2										
	94	MetalPad	2										
	95	Halo Pad	2										
96	SweepPad	2			Converge	2							
Synth Effects	97	Rain	2										
	98	SoundTrk	2			Prologue	2						
	99	Crystal	2										
	100	Atmosphr	2										
	101	Bright	2										
	102	Goblins	2										
	103	Echoes	2										
104	Sci-Fi	2											
Ethnic	105	Sitar	1							DetSitar	2		
	106	Banjo	1					MuteBnjo	1				
	107	Shamisen	1										
	108	Koto	1										
	109	Kalimba	1										
	110	Bagpipe	2										
	111	Fiddle	1										
112	Shanai	1											
Percussive	113	TnklBell	2										
	114	Agogo	2										
	115	SteelDrum	2										
	116	WoodBlok	1										
	117	TaikoDrum	1										
	118	MelodTom	2										
	119	Syn.Drum	1										
	120	RevCymbal	1										
Sound Effects	121	FretNoiz	2										
	122	BrthNoiz	2										
	123	Seashore	2										
	124	Tweet	2										
	125	Telephone	1										
	126	Helicptr	1										
	127	Applause	1										
	128	Gunshot	1										

 Bank 0と同じ音色が入っています。

Bank Select MSB=000,
LSB=バンクナンバー

Instrument Group	Pgm #	Bank 0		Bank 34		Bank 35		Bank 36		Bank 37		Bank 38		Bank 39		Bank 40	
		EL		EL		EL		EL		EL		EL		EL		EL	
Reed	65	SprnoSax	1														
	66	Alto Sax	1													Sax Sect	2
	67	TenorSax	1													BrthTrnSx	2
	68	Bari.Sax	1														
	69	Oboe	2														
	70	Eng.Horn	1														
	71	Bassoon	1														
	72	Clarinet	1														
Pipe	73	Piccolo	1														
	74	Flute	1														
	75	Recorder	1														
	76	PanFlute	1														
	77	Bottle	2														
	78	Shakhchi	2														
	79	Whistle	1														
	80	Ocarina	1														
Synth Lead	81	SquareLd	2														
	82	Saw.Lead	2													PulseSaw	2
	83	CalliopLd	2														
	84	Chiff Ld	2														
	85	CharanLd	2														
	86	Voice Ld	2														
	87	Fifth Ld	2			Big Five	2										
	88	Bass &Ld	2														
Synth Pad	89	NewAgePd	2														
	90	Warm Pad	2														
	91	PolySyPd	2														
	92	ChoirPad	2														
	93	BowedPad	2														
	94	MetalPad	2														
	95	Halo Pad	2														
	96	SweepPad	2														
Synth Effects	97	Rain	2														
	98	SoundTrk	2														
	99	Crystal	2			RndGlock	2									GlockChi	2
	100	Atmosphr	2													NylonEP	2
	101	Bright	2														
	102	Goblins	2														
	103	Echoes	2														
	104	Sci-Fi	2														
Ethnic	105	Sitar	1			Sitar 2	2										
	106	Banjo	1														
	107	Shamisen	1														
	108	Koto	1														
	109	Kalimba	1														
	110	Bagpipe	2														
	111	Fiddle	1														
	112	Shanai	1														
Percussive	113	TnklBell	2														
	114	Agogo	2														
	115	SteelDrm	2														
	116	WoodBlok	1														
	117	TaikoDrm	1														
	118	MelodTom	2														
	119	Syn.Drum	1														
	120	RevCymb1	1														
Sound Effects	121	FretNoiz	2														
	122	BrthNoiz	2														
	123	Seashore	2														
	124	Tweet	2														
	125	Telephone	1														
	126	Helicptr	1														
	127	Applause	1														
	128	Gunshot	1														


Bank 0と同じ音色が入っています。

ノーマルボイス (XGボイス)

Bank Select MSB=000,
LSB=バンクナンバー


Velo-Switch Velo-Xfade other wave

Instrument Group	Pgm #	Bank 0	EL	Bank 41	EL	Bank 42	EL	Bank 43	EL	Bank 45	EL	Bank 64	EL
Piano	1	GrandPno	1	Dream	2								
	2	BritePno	1										
	3	E.Grand	2	EIGrPno2	2								
	4	HnkyTonk	2										
	5	E.Piano1	2							VX EI.P1	2	60sEI.P	1
	6	E.Piano2	2	DX+Analg	2	DXKotoEP	2			VX EI.P2	2		
	7	Harpsi.	1										
	8	Clavi.	2										PulseClv
Chromatic Percussion	9	Celesta	1										
	10	Glocken	1										
	11	MusicBox	2									Orgel	2
	12	Vibes	1							HardVibe	2		
	13	Marimba	1									SineMrb	2
	14	Xylophon	1										
	15	TubulBel	1										
	16	Dulcimer	1										
Organ	17	DrawOrgn	1									Organ Ba	1
	18	PercOrgn	1										
	19	RockOrgn	2									RotaryOr	2
	20	ChrchOrg	2									OrgFlute	2
	21	ReedOrgn	1										
	22	Acordion	2										
	23	Harmnica	1										
	24	TangoAcd	2									TngoAcd2	2
Guitar	25	NylonGtr	1					VelGtHrm	2				
	26	SteelGtr	1	Stl&Body	2								
	27	Jazz Gtr	1										
	28	CleanGtr	1										
	29	Mute.Gtr	1	MuteStlG	2			FunkGtr2	2	Jazz Man	1		
	30	Ovrdrive	1					Gt.Pinch	2				
	31	Dist.Gtr	1	FeedbGt2	2								
	32	GtrHarmo	1										
Bass	33	Aco.Bass	1							VXUprght	2		
	34	FngrBass	1					FngrSlap	2	FngBass2	2		
	35	PickBass	1										
	36	Fretless	1										
	37	SlapBas1	1										
	38	SlapBas2	1					VeloSlap	2				
	39	SynBass1	1									Oscar	2
	40	SynBass2	2	DX Bass	2							X WireBa	2
Strings	41	Violin	1										
	42	Viola	1										
	43	Cello	1										
	44	Contrabs	1										
	45	Trem.Str	1										
	46	Pizz.Str	1										
	47	Harp	1										
	48	Timpani	1										
Ensemble	49	Strings1	1	Orchstr2	2	TremOrch	2			VeloStr	2		
	50	Strings2	1	Kingdom	2							70s Str	1
	51	Syn.Str1	2									Syn Str4	2
	52	Syn.Str2	2										
	53	ChoirAah	1										
	54	VoiceOoh	1										
	55	SynVoice	1	Choral	2							AnaVoice	1
	56	Orch.Hit	2									Impact	2
Brass	57	Trumpet	1										
	58	Trombone	1										
	59	Tuba	1										
	60	Mute.Trp	1										
	61	Fr.Horn	2										
	62	BrasSect	1	HiBrass	2	MelloBrs	2						
	63	SynBras1	2							AnaVelBr	2	AnaBrss1	2
	64	SynBras2	1	ChorBrss	2					VelBras2	2	AnaBrss2	2

 Bank 0と同じ音色が入っています。

Bank Select MSB=000,
LSB=バンクナンバー


Instrument Group	Pgm #	Bank 0	EL	Bank 65	EL	Bank 66	EL	Bank 67	EL	Bank 68	EL	Bank 69	EL	Bank 70	EL	Bank 71	EL
Piano	1	GrandPno	1														
	2	BritePno	1														
	3	E.Grand	2														
	4	HnkyTonk	2														
	5	E.Piano1	2														
	6	E.Piano2	2														
	7	Harpsi.	1														
	8	Clavi.	2	PierceCl	2												
Chromatic Percussion	9	Celesta	1														
	10	Glocken	1														
	11	MusicBox	2														
	12	Vibes	1														
	13	Marimba	1														
	14	Xylophon	1														
	15	TubulBel	1														
	16	Dulcimer	1														
Organ	17	DrawOrgn	1	70sDrOr2	2	CheezOrg	2	DrawOrg3	2								
	18	PercOrgn	1														
	19	RockOrgn	2	SloRotar	2	FstRotar	2										
	20	ChrchOrg	2	TrmOrgFl	2												
	21	ReedOrgn	1														
	22	Acordion	2														
	23	Harmnica	1														
	24	TangoAcid	2														
Guitar	25	NylonGtr	1														
	26	SteelGtr	1														
	27	Jazz Gtr	1														
	28	CleanGtr	1														
	29	Mute.Gtr	1														
	30	Ovrdrive	1														
	31	Dist.Gtr	1														
	32	GtrHarmo	1	GtFeedbk	1	GtrHrmo2	1										
Bass	33	Aco.Bass	1														
	34	FngrBass	1	ModAlem	2												
	35	PickBass	1														
	36	Fretless	1														
	37	SlapBas1	1														
	38	SlapBas2	1														
	39	SynBass1	1	SqrBass	1	RubberBa	2										
	40	SynBass2	2														
Strings	41	Violin	1														
	42	Viola	1														
	43	Cello	1														
	44	Contrabs	1														
	45	Trem.Str	1														
	46	Pizz.Str	1														
	47	Harp	1														
	48	Timpani	1														
Ensemble	49	Strings1	1														
	50	Strings2	1	Str Ens3	1												
	51	Syn.Str1	2	SS Str	2												
	52	Syn.Str2	2														
	53	ChoirAah	1														
	54	VoiceOoh	1														
	55	SynVoice	1														
	56	Orch.Hit	2														
Brass	57	Trumpet	1														
	58	Trombone	1														
	59	Tuba	1														
	60	Mute.Trp	1														
	61	Fr.Horn	2														
	62	BrasSect	1														
	63	SynBras1	2														
	64	SynBras2	1														

 Bank 0と同じ音色が入っています。

ノーマルボイス (XGボイス)

Bank Select MSB=000,
LSB=バンクナンバー

Instrument Group	Pgm #	Bank 0	EL	Velo-Switch			Velo-Xfade			other wave			
				Bank 41	EL	Bank 42	EL	Bank 43	EL	Bank 45	EL	Bank 64	EL
Reed	65	SprnoSax	1										
	66	Alto Sax	1					HyprAlto	2				
	67	TenorSax	1	SoftTenr	2						TnrSax 2	1	
	68	Bari.Sax	1										
	69	Oboe	2										
	70	Eng.Horn	1										
	71	Bassoon	1										
	72	Clarinet	1										
Pipe	73	Piccolo	1										
	74	Flute	1										
	75	Recorder	1										
	76	PanFlute	1										
	77	Bottle	2										
	78	Shakhchi	2										
	79	Whistle	1										
	80	Ocarina	1										
Synth Lead	81	SquareLd	2								Mellow	2	
	82	Saw.Lead	2	Dr. Lead	2					VeloLead	2		
	83	CalliopLd	2										
	84	Chiff Ld	2								Rubby	2	
	85	CharanLd	2								DistLead	2	
	86	Voice Ld	2								VoxLead	2	
	87	Fifth Ld	2										
	88	Bass &Ld	2								Fat&Prky	2	
Synth Pad	89	NewAgePd	2								Fantasy2	2	
	90	Warm Pad	2								Horn Pad	2	
	91	PolySyPd	2								PolyPd80	2	
	92	ChoirPad	2								Heaven2	2	
	93	BowedPad	2								Glacier	2	
	94	MetalPad	2								Tine Pad	2	
	95	Halo Pad	2										
	96	SweepPad	2								PolarPad	2	
Synth Effects	97	Rain	2							ClaviPad	2	HrmoRain	2
	98	SoundTrk	2									Ancestrl	2
	99	Crystal	2	ClearBel	2	ChorBell	2					SynMalet	1
	100	Atmosphr	2									NyInHarp	2
	101	Bright	2									FantaBel	2
	102	Goblins	2									GobSyn	2
	103	Echoes	2									EchoBell	2
	104	Sci-Fi	2									Starz	2
Ethnic	105	Sitar	1										
	106	Banjo	1										
	107	Shamisen	1										
	108	Koto	1										
	109	Kalimba	1										
	110	Bagpipe	2										
	111	Fiddle	1										
	112	Shanai	1								Shanai2	1	
Percussive	113	TrnklBell	2										
	114	Agogo	2										
	115	SteelDrm	2										
	116	WoodBlok	1										
	117	TaikoDrm	1										
	118	MelodTom	2								Mel Tom2	1	
	119	Syn.Drum	1								Ana Tom	1	
	120	RevCymb1	1										
Sound Effects	121	FretNoiz	2										
	122	BrthNoiz	2										
	123	Seashore	2										
	124	Tweet	2										
	125	Telephone	1										
	126	Helicptr	1										
	127	Applause	1										
	128	Gunshot	1										

 Bank 0と同じ音色が入っています。

Bank Select MSB=000,
LSB=バンクナンバー


Instrument Group	Pgm #	Bank 0	EL	Bank 65	EL	Bank 66	EL	Bank 67	EL	Bank 68	EL	Bank 69	EL	Bank 70	EL	Bank 71	EL
Reed	65	SprnoSax	1														
	66	Alto Sax	1														
	67	TenorSax	1														
	68	Bari.Sax	1														
	69	Oboe	2														
	70	Eng.Horn	1														
	71	Bassoon	1														
72	Clarinet	1															
Pipe	73	Piccolo	1														
	74	Flute	1														
	75	Recorder	1														
	76	PanFlute	1														
	77	Bottle	2														
	78	Shakhchi	2														
	79	Whistle	1														
	80	Ocarina	1														
Synth Lead	81	SquareLd	2	SoloSine	2	SineLead	1										
	82	Saw.Lead	2														
	83	CaliopLd	2	Pure Pad	2												
	84	Chiff Ld	2														
	85	CharanLd	2	WireLead	2												
	86	Voice Ld	2														
	87	Fifth Ld	2														
	88	Bass &Ld	2	SoftWurl	2												
Synth Pad	89	NewAgePd	2														
	90	Warm Pad	2	RotarStr	2												
	91	PolySyPd	2	ClickPad	2	Ana Pad	2	SquarPad	2								
	92	ChoirPad	2			Itopia	2	CC Pad	2								
	93	BowedPad	2	GlassPad	2												
	94	MetalPad	2	Pan Pad	2												
	95	Halo Pad	2														
	96	SweepPad	2			Celstial	2										
Synth Effects	97	Rain	2	AfrnWnd	2	Caribbean	2										
	98	SoundTrk	2														
	99	Crystal	2	SftCryst	2	LoudGlok	2	XmasBell	2	VibeBell	2	DigitBell	2	AirBells	2	BellHarp	2
	100	Atmosphr	2	Harp Vox	2	AtmosPad	2	Planet	2								
	101	Bright	2														
	102	Goblins	2	50sSciFi	2	Ring Pad	2	Ritual	2	ToHeaven	2			Night	2	Glisten	2
	103	Echoes	2	Big Pan	2	SynPiano	2	Creation	2	Stardust	2	Reso Pan	2				
	104	Sci-Fi	2														
Ethnic	105	Sitar	1														
	106	Banjo	1														
	107	Shamisen	1														
	108	Koto	1														
	109	Kalimba	1														
	110	Bagpipe	2														
	111	Fiddle	1														
	112	Shanai	1														
Percussive	113	TnklBell	2														
	114	Agogo	2														
	115	SteelDrm	2														
	116	WoodBlok	1														
	117	TaikoDrm	1														
	118	MelodTom	2	Real Tom	2	Rock Tom	2										
	119	Syn.Drum	1	ElecPerc	2												
	120	RevCymb1	1														
Sound Effects	121	FretNoiz	2														
	122	BrthNoiz	2														
	123	Seashore	2														
	124	Tweet	2														
	125	Telephone	1														
	126	Helicptr	1														
	127	Applause	1														
	128	Gunshot	1														

Bank 0と同じ音色が入っています。

ノーマルボイス (XGボイス)


Bank Select MSB=000,
LSB=バンクナンバー

Instrument Group	Pgm #	Bank 0	EL	Bank 72	EL	Bank 96	EL	Bank 97	EL	Bank 98	EL	Bank 99	EL
Piano	1	GrandPno	1										
	2	BritePno	1										
	3	E.Grand	2										
	4	HnkyTonk	2										
	5	E.Piano1	2										
	6	E.Piano2	2										
	7	Harpsi.	1										
	8	Clavi.	2										
Chromatic Percussion	9	Celesta	1										
	10	Glocken	1										
	11	MusicBox	2										
	12	Vibes	1										
	13	Marimba	1					Balafon2	2	Log Drum	2		
	14	Xylophon	1										
	15	TubulBel	1			ChrchBel	2	Carillon	2				
	16	Dulcimer	1			Cimbalom	2	Santur	2				
Organ	17	DrawOrgn	1										
	18	PercOrgn	1										
	19	RockOrgn	2										
	20	ChrchOrg	2										
	21	ReedOrgn	1										
	22	Acordion	2										
	23	Harmnica	1										
	24	TangoAcid	2										
Guitar	25	NylonGtr	1			Ukulele	1						
	26	SteelGtr	1			Mandolin	2						
	27	Jazz Gtr	1										
	28	CleanGtr	1										
	29	Mute.Gtr	1										
	30	Ovrdrive	1										
	31	Dist.Gtr	1										
	32	GtrHarmo	1										
Bass	33	Aco.Bass	1										
	34	FngrBass	1										
	35	PickBass	1										
	36	Fretless	1			SynFretl	2	Smooth	2				
	37	SlapBas1	1										
	38	SlapBas2	1										
	39	SynBass1	1			Hammer	2						
	40	SynBass2	2										
Strings	41	Violin	1										
	42	Viola	1										
	43	Cello	1										
	44	Contrabs	1										
	45	Trem.Str	1										
	46	Pizz.Str	1										
	47	Harp	1										
	48	Timpani	1										
Ensemble	49	Strings1	1										
	50	Strings2	1										
	51	Syn.Str1	2										
	52	Syn.Str2	2										
	53	ChoirAah	1										
	54	VoiceOoh	1										
	55	SynVoice	1										
	56	Orch.Hit	2										
Brass	57	Trumpet	1										
	58	Trombone	1										
	59	Tuba	1										
	60	Mute.Trp	1										
	61	Fr.Horn	2										
	62	BrasSect	1										
	63	SynBras1	2										
	64	SynBras2	1										

 Bank 0と同じ音色が入っています。

Bank Select MSB=000,
LSB=バンクナンバー

Instrument Group	Pgm #	Bank 0	EL	Bank 100	EL	Bank 101	EL
Piano	1	GrandPno	1				
	2	BritePno	1				
	3	E.Grand	2				
	4	HnkyTonk	2				
	5	E.Piano1	2				
	6	E.Piano2	2				
	7	Harpsi.	1				
	8	Clavi.	2				
Chromatic Percussion	9	Celesta	1				
	10	Glocken	1				
	11	MusicBox	2				
	12	Vibes	1				
	13	Marimba	1				
	14	Xylophon	1				
	15	TubulBel	1				
	16	Dulcimer	1				
Organ	17	DrawOrgn	1				
	18	PercOrgn	1				
	19	RockOrgn	2				
	20	ChrchOrg	2				
	21	ReedOrgn	1				
	22	Acordion	2				
	23	Harmnica	1				
	24	TangoAcid	2				
Guitar	25	NylonGtr	1				
	26	SteelGtr	1				
	27	Jazz Gtr	1				
	28	CleanGtr	1				
	29	Mute.Gtr	1				
	30	Ovrdrive	1				
	31	Dist.Gtr	1				
	32	GtrHarmo	1				
Bass	33	Aco.Bass	1				
	34	FngrBass	1				
	35	PickBass	1				
	36	Fretless	1				
	37	SlapBas1	1				
	38	SlapBas2	1				
	39	SynBass1	1				
	40	SynBass2	2				
Strings	41	Violin	1				
	42	Viola	1				
	43	Cello	1				
	44	Contrabs	1				
	45	Trem.Str	1				
	46	Pizz.Str	1				
	47	Harp	1				
	48	Timpani	1				
Ensemble	49	Strings1	1				
	50	Strings2	1				
	51	Syn.Str1	2				
	52	Syn.Str2	2				
	53	ChoirAah	1				
	54	VoiceOoh	1				
	55	SynVoice	1				
	56	Orch.Hit	2				
Brass	57	Trumpet	1				
	58	Trombone	1				
	59	Tuba	1				
	60	Mute.Trp	1				
	61	Fr.Horn	2				
	62	BrasSect	1				
	63	SynBras1	2				
	64	SynBras2	1				

 Bank 0と同じ音色が入っています。

SFX


Pgm #	Bank 0	EL
1	CuttngNz	1
2	CttngNz2	2
3		
4	Str Slap	1
5		
6		
7		
8		
9		
10		
11		
12		
13		
14		
15		
16		
17	Fl.KClk	1
18		
19		
20		
21		
22		
23		
24		
25		
26		
27		
28		
29		
30		
31		
32		
33	Rain	1
34	Thunder	1
35	Wind	1
36	Stream	2
37	Bubble	2
38	Feed	2
39		
40		
41		
42		
43		
44		
45		
46		
47		
48		
49	Dog	1
50	Horse	1
51	Bird 2	1
52		
53		
54		
55	Ghost	2
56	Maou	2
57		
58		
59		
60		
61		
62		
63		
64		

 音はなりません。

ノーマルボイス (XGボイス)


Bank Select MSB=000,
LSB=バンクナンバー

Instrument Group	Pgm #	Bank 0	EL	Bank 72	EL	Bank 96	EL	Bank 97	EL	Bank 98	EL	Bank 99	EL	
Reed	65	SprnoSax	1											
	66	Alto Sax	1											
	67	TenorSax	1											
	68	Bari.Sax	1											
	69	Oboe	2											
	70	Eng.Horn	1											
	71	Bassoon	1											
	72	Clarinet	1											
Pipe	73	Piccolo	1											
	74	Flute	1											
	75	Recorder	1											
	76	PanFlute	1											
	77	Bottle	2											
	78	Shakhchi	2											
	79	Whistle	1											
	80	Ocarina	1											
Synth Lead	81	SquareLd	2											
	82	Saw.Lead	2			Seq Ana	2							
	83	CaliopLd	2											
	84	Chiff Ld	2											
	85	CharanLd	2											
	86	Voice Ld	2											
	87	Fifth Ld	2											
	88	Bass &Ld	2											
Synth Pad	89	NewAgePd	2											
	90	Warm Pad	2											
	91	PolySyPd	2											
	92	ChoirPad	2											
	93	BowedPad	2											
	94	MetalPad	2											
	95	Halo Pad	2											
	96	SweepPad	2											
Synth Effects	97	Rain	2											
	98	SoundTrk	2											
	99	Crystal	2	Gamelmba	2									
	100	Atmosphr	2											
	101	Bright	2			Smokey	2							
	102	Goblins	2			BelChoir	2							
	103	Echoes	2											
	104	Sci-Fi	2											
Ethnic	105	Sitar	1			Tambra	2	Tamboura	2					
	106	Banjo	1			Rabab	2	Gopichnt	2	Oud	2			
	107	Shamisen	1											
	108	Koto	1			T. Koto	2	Kanoon	2					
	109	Kalimba	1											
	110	Bagpipe	2											
	111	Fiddle	1											
	112	Shanai	1			Pungi	1	Hichriki	2					
Percussive	113	TnklBell	2			Bonang	2	Gender	2	Gamelan	2	S.Gamian	2	
	114	Agogo	2											
	115	SteelDrm	2					GlasPerc	2	ThaiBell	2			
	116	WoodBlok	1			Castanet	1							
	117	TaikoDrm	1			Gr.Cassa	1							
	118	MelodTom	2											
	119	Syn.Drum	1											
	120	RevCymb1	1											
	Sound Effects	121	FretNoiz	2										
		122	BrthNoiz	2										
123		Seashore	2											
124		Tweet	2											
125		Telephone	1											
126		Helicptr	1											
127		Applause	1											
128		Gunshot	1											

 Bank 0と同じ音色が入っています。

Bank Select MSB=000,
LSB=バンクナンバー

Instrument Group	Pgm #	Bank 0	EL	Bank 100	EL	Bank 101	EL	
Reed	65	SprnoSax	1					
	66	Alto Sax	1					
	67	TenorSax	1					
	68	Bari.Sax	1					
	69	Oboe	2					
	70	Eng.Horn	1					
	71	Bassoon	1					
	72	Clarinet	1					
	Pipe	73	Piccolo	1				
		74	Flute	1				
75		Recorder	1					
76		PanFlute	1					
77		Bottle	2					
78		Shakhchi	2					
79		Whistle	1					
80		Ocarina	1					
Synth Lead		81	SquareLd	2				
	82	Saw.Lead	2					
	83	CaliopLd	2					
	84	Chiff Ld	2					
	85	CharanLd	2					
	86	Voice Ld	2					
	87	Fifth Ld	2					
	88	Bass &Ld	2					
Synth Pad	89	NewAgePd	2					
	90	Warm Pad	2					
	91	PolySyPd	2					
	92	ChoirPad	2					
	93	BowedPad	2					
	94	MetalPad	2					
	95	Halo Pad	2					
	96	SweepPad	2					
Synth Effects	97	Rain	2					
	98	SoundTrk	2					
	99	Crystal	2					
	100	Atmosphr	2					
	101	Bright	2					
	102	Goblins	2					
	103	Echoes	2					
	104	Sci-Fi	2					
Ethnic	105	Sitar	1					
	106	Banjo	1					
	107	Shamisen	1					
	108	Koto	1					
	109	Kalimba	1					
	110	Bagpipe	2					
	111	Fiddle	1					
	112	Shanai	1					
Percussive	113	TnklBell	2	Rama Cym	2	AsianBel	2	
	114	Agogo	2					
	115	SteelDrm	2					
	116	WoodBlok	1					
	117	TaikoDrm	1					
	118	MelodTom	2					
	119	Syn.Drum	1					
	120	RevCymb1	1					
	Sound Effects	121	FretNoiz	2				
		122	BrthNoiz	2				
123		Seashore	2					
124		Tweet	2					
125		Telephone	1					
126		Helicptr	1					
127		Applause	1					
128		Gunshot	1					

 Bank 0と同じ音色が入っています。

SFX

Pgm #	Bank 0	EL
65	Tel.Dial	1
66	DoorSqek	1
67	Door Slam	1
68	Scratch	1
69	Scratch 2	2
70	WindChm	1
71	Telphon2	1
72		
73		
74		
75		
76		
77		
78		
79		
80		
81	CarEngin	1
82	Car Stop	1
83	Car Pass	1
84	CarCrash	1
85	Siren	2
86	Train	1
87	Jetplane	2
88	Starship	2
89	Burst	2
90	Coaster	2
91	SbMarine	2
92		
93		
94		
95		
96		
97	Laughing	1
98	Scream	1
99	Punch	1
100	Heart	1
101	FootStep	1
102		
103		
104		
105		
106		
107		
108		
109		
110		
111		
112		
113	MchinGun	1
114	LaserGun	2
115	Xplosion	2
116	FireWork	2
117		
118		
119		
120		
121		
122		
123		
124		
125		
126		
127		
128		

 音はなりません。

ノーマルボイス (GSボイス)

Bank Select MSB=バンクナンバー,
LSB=000

Instrument Group	Pgm #	Bank 0	EL	Bank 1	EL	Bank 2	EL	Bank 3	EL	Bank 4	EL	Bank 5	EL
Piano	1	GrandPno	1										
	2	BritePno	1										
	3	E.Grand	2	EIGrPno1	2	EIGrPno2	2						
	4	HnkyTonk	2										
	5	E.Piano1	2										
	6	E.Piano2	2										
	7	Harpsi.	1										
	8	Clavi.	2										
Chromatic Percussion	9	Celesta	1										
	10	Glocken	1										
	11	MusicBox	2										
	12	Vibes	1	HardVibe	2								
	13	Marimba	1										
	14	Xylophon	1										
	15	TubulBel	1										
	16	Dulcimer	1	Dulcimr2	2								
Organ	17	DrawOrgn	1	70sDrOr1	2								
	18	PercOrgn	1	70sPcOr1	2								
	19	RockOrgn	2										
	20	ChrchOrg	2										
	21	ReedOrgn	1										
	22	Acordion	2										
	23	Harmnica	1	Harmo 2	2								
	24	TangoAcd	2										
Guitar	25	NylonGtr	1										
	26	SteelGtr	1										
	27	Jazz Gtr	1	MelloGtr	1								
	28	CleanGtr	1										
	29	Mute. Gtr	1										
	30	Ovrdrive	1										
	31	Dist.Gtr	1										
	32	GtrHarmo	1										
Bass	33	Aco.Bass	1										
	34	FngrBass	1	FngBass2	2								
	35	PickBass	1										
	36	Fretless	1	Fretles2	2	Fretles3	2	Fretles4	2	SynFretl	2	Smooth	2
	37	SlapBas1	1										
	38	SlapBas2	1										
	39	SynBass1	1	SynBa1Dk	1								
	40	SynBass2	2	ClkSynBa	2	ModulrBa	2	Seq Bass	2				
Strings	41	Violin	1										
	42	Viola	1										
	43	Cello	1										
	44	Contrabs	1										
	45	Trem.Str	1										
	46	Pizz.Str	1										
	47	Harp	1										
	48	Timpani	1										
Ensemble	49	Strings1	1	Slow Str	1								
	50	Strings2	1	70s Str	1								
	51	Syn.Str1	2	Syn Str4	2								
	52	Syn.Str2	2										
	53	ChoirAah	1										
	54	VoiceOoh	1										
	55	SynVoice	1										
	56	Orch.Hit	2	OrchHit2	2								
Brass	57	Trumpet	1	Trumpet2	1								
	58	Trombone	1	Trmbone2	2								
	59	Tuba	1	Tuba 2	1								
	60	Mute. Trp	1										
	61	Fr.Horn	2	FrHorn2	2								
	62	BrasSect	1										
	63	SynBras1	2	PolyBrss	2								
	64	SynBras2	1	Soft Brs	2								

 Bank 0と同じ音色が入っています。

Bank Select MSB=バンクナンバー,
LSB=000

Instrument Group	Pgm #	Bank 0	EL	Bank 6	EL	Bank 7	EL	Bank 8	EL	Bank 9	EL	Bank 10	EL	Bank 11	EL	Bank 16	EL
Piano	1	GrandPno	1					GrndPnoK	1							MelloGrP	1
	2	BritePno	1					BritPnoK	1								
	3	E.Grand	2					EIGrPnoK	2								
	4	HnkyTonk	2					HnkyTnkK	2								
	5	E.Piano1	2					Chor.EP1	2							VX EI.P1	2
	6	E.Piano2	2					Chor.EP2	2							VX EI.P2	2
	7	Harpsi.	1					Harpsi.3	2							Harpsi.K	1
	8	Clavi.	2					Clavi. K	1								
Chromatic Percussion	9	Celesta	1														
	10	Glocken	1														
	11	MusicBox	2														
	12	Vibes	1					VibesK	1								
	13	Marimba	1					MarimbaK	1								
	14	Xylophon	1														
	15	TubulBel	1					ChrchBel	2	Carillon	2						
	16	Dulcimer	1					Cimbalom	2								
Organ	17	DrawOrgn	1					DetDrwOr	2	70sDrOr2	2					60sDrOr1	2
	18	PercOrgn	1					DetProOr	2								
	19	RockOrgn	2					RotaryOr	2							SloRotar	2
	20	ChrchOrg	2					ChurOrg2	2							ChurOrg3	2
	21	ReedOrgn	1														
	22	Acordion	2					Accordlt	2								
	23	Harmnica	1														
	24	TangoAcid	2														
Guitar	25	NylonGtr	1					Ukulele	1							NylonGt3	2
	26	SteelGtr	1					12StrGtr	2	Nyln&Stl	2					Mandolin	2
	27	Jazz Gtr	1					PdlSteel	1								
	28	CleanGtr	1					ChorusGt	2								
	29	Mute.Gtr	1					FunkGtr1	2							FunkGtr2	2
	30	Ovrdrive	1														
	31	Dist.Gtr	1					FeedbkGt	2	FeedbGt2	2						
	32	GtrHarmo	1					GtFeedbk	1								
Bass	33	Aco.Bass	1														
	34	FngrBass	1														
	35	PickBass	1					MutePkBa	1								
	36	Fretless	1														
	37	SlapBas1	1					ResoSlap	1								
	38	SlapBas2	1														
	39	SynBass1	1					AcidBass	1	FastResB	1	TeknoBa	2			ResoBass	1
	40	SynBass2	2					DX Bass	2	X WireBa	2					RubberBa	2
Strings	41	Violin	1					SlowVln	1								
	42	Viola	1														
	43	Cello	1														
	44	Contrabs	1														
	45	Trem.Str	1					SlowTrStr	1	Susp Str	2						
	46	Pizz.Str	1														
	47	Harp	1														
	48	Timpani	1														
Ensemble	49	Strings1	1					Orchestr	2	Orchstr2	2	TremOrch	2	ChoirStr	2	S.Strngs	2
	50	Strings2	1					LegatoSt	2	Warm Str	2	S.SlwStr	2				
	51	Syn.Str1	2														
	52	Syn.Str2	2														
	53	ChoirAah	1					S.Choir	2	MelChoir	2						
	54	VoiceOoh	1														
	55	SynVoice	1					SynVox2	2								
	56	Orch.Hit	2					Impact	2							LoFiRave	2
Brass	57	Trumpet	1														
	58	Trombone	1														
	59	Tuba	1														
	60	Mute.Trp	1														
	61	Fr.Horn	2					FrHrSolo	1							HornOrch	2
	62	BrasSect	1					BrssSec2	2								
	63	SynBras1	2					SynBras3	2	QuackBr	2					AnaBrss1	2
	64	SynBras2	1					SynBras4	2							AnaBrss2	2

Bank 0と同じ音色が入っています。

ノーマルボイス (GSボイス)


Bank Select MSB=バンクナンバー,
LSB=000

Instrument Group	Pgm #	Bank 0	EL	Bank 1	EL	Bank 2	EL	Bank 3	EL	Bank 4	EL	Bank 5	EL
Reed	65	SprnoSax	1										
	66	Alto Sax	1										
	67	TnrSax 2	1										
	68	Bari.Sax	1										
	69	Oboe	2										
	70	Eng.Horn	1										
	71	Bassoon	1										
	72	Clarinet	1										
Pipe	73	Piccolo	1										
	74	Flute	1										
	75	Recorder	1										
	76	PanFlute	1										
	77	Bottle	2										
	78	Shakhchi	2										
	79	Whistle	1										
	80	Ocarina	1										
Synth Lead	81	SquareLd	2	Square 2	1	Hollow	1	Mellow	2	SoloSine	2	Shmoog	2
	82	Saw.Lead	2	Saw 2	1	PulseSaw	2	ThickSaw	2	Big Lead	2	VeloLead	2
	83	CalliopLd	2			Pure Pad	2						
	84	Chiff Ld	2										
	85	CharanLd	2										
	86	Voice Ld	2										
	87	Fifth Ld	2	Big Five	2								
	88	Bass &Ld	2	Big&Low	2	Fat&Prky	2						
Synth Pad	89	NewAgePd	2	Fantasy2	2								
	90	Warm Pad	2	ThickPad	2	Horn Pad	2	RotarStr	2	Soft Pad	2		
	91	PolySyPd	2	PolyPd80	2								
	92	ChoirPad	2	Heaven2	2								
	93	BowedPad	2										
	94	MetalPad	2	Tine Pad	2	Pan Pad	2						
	95	Halo Pad	2										
	96	SweepPad	2	PolarPad	2								
Synth Effects	97	Rain	2	HrmoRain	2	AfrenWnd	2						
	98	SoundTrk	2	Ancestrl	2	Prologue	2						
	99	Crystal	2	SynMalet	1	SftCryst	2	RndGlock	2	LoudGlok	2	GlockChi	2
	100	Atmosphr	2	WarmAtms	2	NylnHarp	2	Harp Vox	2	HollwRls	2	NylonEP	2
	101	Bright	2										
	102	Goblins	2	GobSyn	2	50sSciFi	2						
	103	Echoes	2	EchoBell	2	Echo Pan	2	EchoPad2	2	Big Pan	2		
	104	Sci-Fi	2	Starz	2								
Ethnic	105	Sitar	1	Sitar 2	2	DetSitar	2						
	106	Banjo	1	MuteBnjo	1								
	107	Shamisen	1										
	108	Koto	1										
	109	Kalimba	1										
	110	Bagpipe	2										
	111	Fiddle	1										
	112	Shanai	1	Shanai2	1								
Percussive	113	TrnkBell	2										
	114	Agogo	2										
	115	SteelDrm	2										
	116	WoodBlok	1										
	117	TaikoDrm	1										
	118	MelodTom	2	Real Tom	2								
	119	Syn.Drum	1										
	120	RevCymb1	1										
Sound Effects	121	FretNoiz	2	CuttngNz	1	Str Slap	1	CtngNz2	2				
	122	BrthNoiz	2	Fl.KClk	1								
	123	Seashore	2	Rain	1	Thunder	1	Wind	1	Stream	2	Bubble	2
	124	Tweet	2	Dog	1	Horse	1	Bird 2	1				
	125	Telephone	1	Tel.Dial	1	DoorSqek	1	DoorSlam	1	Scratch	1	WindChm	1
	126	Helicptr	1	CarEngin	1	Car Stop	1	Car Pass	1	CarCrash	1	Siren	2
	127	Applause	1	Laughing	1	Scream	1	Punch	1	Heart	1	FootStep	1
	128	Gunshot	1	MchinGun	1	LaserGun	2	Xplosion	2				

 Bank 0と同じ音色が入っています。

Bank Select MSB=バンクナンバー,
LSB=000


Instrument Group	Pgm #	Bank 0	EL	Bank 6	EL	Bank 7	EL	Bank 8	EL	Bank 9	EL	Bank 10	EL	Bank 11	EL	Bank 16	EL
Reed	65	SprnoSax	1														
	66	Alto Sax	1					HyprAlto	2								
	67	TnrSax 2	1					BrthTnSx	2								
	68	Bari.Sax	1														
	69	Oboe	2														
	70	Eng.Horn	1														
	71	Bassoon	1														
	72	Clarinet	1														
Pipe	73	Piccolo	1														
	74	Flute	1														
	75	Recorder	1														
	76	PanFlute	1														
	77	Bottle	2														
	78	Shakhchi	2														
	79	Whistle	1														
	80	Ocarina	1														
Synth Lead	81	SquareLd	2	LMSquare	2			SineLead	1								
	82	Saw.Lead	2	HeavySyn	2	DynaSaw	1	Dr. Lead	2							WaspySyn	2
	83	CaliopLd	2														
	84	Chiff Ld	2														
	85	CharanLd	2					DistLead	2								
	86	Voice Ld	2														
	87	Fifth Ld	2														
	88	Bass &Ld	2														
Synth Pad	89	NewAgePd	2														
	90	Warm Pad	2														
	91	PolySyPd	2														
	92	ChoirPad	2														
	93	BowedPad	2														
	94	MetalPad	2														
	95	Halo Pad	2														
	96	SweepPad	2					Converge	2	Shwimmer	2	Celstial	2				
Synth Effects	97	Rain	2					ClaviPad	2								
	98	SoundTrk	2														
	99	Crystal	2	ClearBel	2	XmasBell	2	VibeBell	2	DigiBell	2					ChorBell	2
	100	Atmosphr	2	AtmosPad	2												
	101	Bright	2														
	102	Goblins	2														
	103	Echoes	2	SynPiano	2												
	104	Sci-Fi	2														
Ethnic	105	Sitar	1					Tambra	2							Tamboura	2
	106	Banjo	1					Rabab	2							Gopichnt	2
	107	Shamisen	1														
	108	Koto	1					T. Koto	2							Kanoon	2
	109	Kalimba	1														
	110	Bagpipe	2														
	111	Fiddle	1														
	112	Shanai	1					Pungi	1							Hichriki	2
Percussive	113	TnklBell	2					Bonang	2	Gender	2	Gamelan	2	S.Gamlan	2	Rama Cym	2
	114	Agogo	2														
	115	SteelDrm	2														
	116	WoodBlok	1					Castanet	1								
	117	TaikoDrm	1					Gr.Cassa	1								
	118	MelodTom	2					Mel Tom2	1	Rock Tom	2						
	119	Syn.Drum	1					Ana Tom	1	ElecPerc	2						
	120	RevCymb1	1														
Sound Effects	121	FretNoiz	2														
	122	BrthNoiz	2														
	123	Seashore	2														
	124	Tweet	2														
	125	Telephone	1	Scratch2	2												
	126	Helicptr	1	Train	1	Jetplane	2	Starship	2	Burst	2					Coaster	2
	127	Applause	1														
	128	Gunshot	1														

 Bank 0と同じ音色が入っています。

ノーマルボイス (GSボイス)

 
Bank Select MSB=バンクナンバー,
LSB=000

Instrument Group	Pgm #	Bank 0	EL	Bank 17	EL	Bank 18	EL	Bank 19	EL	Bank 24	EL	Bank 25	EL
Piano	1	GrandPno	1										
	2	BritePno	1										
	3	E.Grand	2										
	4	HnkyTonk	2										
	5	E.Piano1	2							60sEl.P	1	HardEl.P	2
	6	E.Piano2	2							DX Hard	2		
	7	Harpsi.	1							Harpsi.2	2		
	8	Clavi.	2										
Chromatic Percussion	9	Celesta	1										
	10	Glocken	1										
	11	MusicBox	2										
	12	Vibes	1										
	13	Marimba	1	Balafon2	2					Log Drum	2		
	14	Xylophon	1										
	15	TubulBel	1										
	16	Dulcimer	1										
Organ	17	DrawOrgn	1	60sDrOr2	2	60sDrOr3	2			CheezOrg	2		
	18	PercOrgn	1										
	19	RockOrgn	2							FstRotar	2		
	20	ChrchOrg	2							OrgFlute	2		
	21	ReedOrgn	1										
	22	Acordion	2										
	23	Harmnica	1										
	24	TangoAcid	2										
Guitar	25	NylonGtr	1							VelGtHrm	2		
	26	SteelGtr	1										
	27	Jazz Gtr	1										
	28	CleanGtr	1										
	29	Mute.Gtr	1										
	30	Ovrdrive	1										
	31	Dist.Gtr	1										
	32	GtrHarmo	1										
Bass	33	Aco.Bass	1										
	34	FngrBass	1										
	35	PickBass	1										
	36	Fretless	1										
	37	SlapBas1	1										
	38	SlapBas2	1										
	39	SynBass1	1										
	40	SynBass2	2	SynBa2Dk	1	MelloSB1	1	SmthBa 2	2				
Strings	41	Violin	1										
	42	Viola	1										
	43	Cello	1										
	44	Contrabs	1										
	45	Trem.Str	1										
	46	Pizz.Str	1										
	47	Harp	1										
	48	Timpani	1										
Ensemble	49	Strings1	1							VeloStr	2		
	50	Strings2	1										
	51	Syn.Str1	2										
	52	Syn.Str2	2										
	53	ChoirAah	1										
	54	VoiceOoh	1										
	55	SynVoice	1										
	56	Orch.Hit	2										
Brass	57	Trumpet	1							BriteTrp	2	WarmTrp	2
	58	Trombone	1										
	59	Tuba	1										
	60	Mute.Trp	1										
	61	Fr.Horn	2										
	62	BrasSect	1										
	63	SynBras1	2										
	64	SynBras2	1	VelBras2	2								

 Bank 0と同じ音色が入っています。

Bank Select MSB=バンクナンバー,
LSB=000


Instrument Group	Pgm #	Bank 0	EL	Bank 26	EL	Bank 32	EL	Bank 33	EL	Bank 40	EL	Bank 126	EL	Bank 127	EL
Piano	1	GrandPno	1									A-Piano1	2	a.piano1	1
	2	BritePno	1									A-Piano2	2	a.piano2	1
	3	E.Grand	2									A-Piano3	2	a.piano3	1
	4	HnkyTonk	2									A-Piano4	2	e.piano1	1
	5	E.Piano1	2	MelloEP1	2	El.Pno1K	1					A-Piano5	1	e.piano2	1
	6	E.Piano2	2			El.Pno2K	1					A-Piano6	1	e.piano3	1
	7	Harpsi.	1									A-Piano7	1	e.piano4	1
	8	Clavi.	2									E-Piano1	2	hnkytnk	2
Chromatic Percussion	9	Celesta	1									E-Piano2	2	e.organ1	2
	10	Glocken	1									E-Piano3	2	e.organ2	2
	11	MusicBox	2									A-Guitr1	1	e.organ3	1
	12	Vibes	1									A-Guitr2	2	e.organ4	1
	13	Marimba	1									A-Guitr3	2	pipeorg1	2
	14	Xylophon	1									E-Guitr1	2	pipeorg2	2
	15	TubulBel	1									E-Guitr2	1	pipeorg3	2
	16	Dulcimer	1									Slap-1	2	acordion	2
Organ	17	DrawOrgn	1			DrawOrg2	2	EvenBar	2	Organ Ba	1	Slap-2	2	harpsi1	1
	18	PercOrgn	1			PercOrg2	2					Slap-3	2	harpsi2	2
	19	RockOrgn	2									Slap-4	2	harpsi3	1
	20	ChrchOrg	2			TrmOrgFl	2					Slap-5	2	clavi1	1
	21	ReedOrgn	1									Slap-6	2	clavi2	1
	22	Acordion	2									Slap-7	2	clavi3	1
	23	Harmnica	1									Slap-8	2	celesta1	1
	24	TangoAcd	2									Finger-1	1	celesta2	1
Guitar	25	NylonGtr	1			NylonGt2	1			LequintG	1	Finger-2	2	synbras1	2
	26	SteelGtr	1			SteelGt2	1					Picked-1	1	synbras2	2
	27	Jazz Gtr	1									Picked-2	2	synbras3	2
	28	CleanGtr	1									FretlsBs	1	synbras4	2
	29	Mute.Gtr	1									A-Bass	2	synbass1	1
	30	Ovrdrive	1									Choir-1	1	synbass2	1
	31	Dist.Gtr	1									Choir-2	1	synbass3	2
	32	GtrHarmo	1									Choir-3	2	synbass4	1
Bass	33	Aco.Bass	1									Choir-4	2	newagepd	2
	34	FngrBass	1									Strngs-1	2	synharmo	2
	35	PickBass	1									Strngs-2	2	choir pd	2
	36	Fretless	1									Strngs-3	2	bowed pd	2
	37	SlapBas1	1									Strngs-4	2	soundtrk	2
	38	SlapBas2	1									E-Organ1	2	atmosphr	2
	39	SynBass1	1									E-Organ2	2	syn warm	2
	40	SynBass2	2									E-Organ3	2	synfunny	1
Strings	41	Violin	1									E-Organ4	2	synecho1	2
	42	Viola	1									E-Organ5	2	rain	2
	43	Cello	1									E-Organ6	2	synoboe	2
	44	Contrabs	1									E-Organ7	2	synecho2	2
	45	Trem.Str	1									E-Organ8	2	synsolo	2
	46	Pizz.Str	1									E-Organ9	2	synrdorg	2
	47	Harp	1									SoftTP-1	1	synbell	1
	48	Timpani	1									SoftTP-2	1	squareld	2
Ensemble	49	Strings1	1									TP/TRB-1	1	strsect1	2
	50	Strings2	1									TP/TRB-2	1	strsect2	2
	51	Syn.Str1	2									TP/TRB-3	1	strsect3	2
	52	Syn.Str2	2									TP/TRB-4	1	pizz.str	1
	53	ChoirAah	1			Ch.Aahs2	2					TP/TRB-5	2	violin 1	2
	54	VoiceOoh	1									TP/TRB-6	2	violin 2	1
	55	SynVoice	1									Sax-1	1	cello 1	1
	56	Orch.Hit	2									Sax-2	1	cello 2	1
Brass	57	Trumpet	1									Sax-3	1	contrabs	1
	58	Trombone	1									Sax-4	2	harp 1	1
	59	Tuba	1									Brass-1	1	harp 2	1
	60	Mute.Trp	1									Brass-2	1	guitar 1	1
	61	Fr.Horn	2									Brass-3	2	guitar 2	1
	62	BrasSect	1									Brass-4	2	elecctr1	2
	63	SynBras1	2									Brass-5	2	elecctr2	2
	64	SynBras2	1									Orch-Hit	1	sitar	1

 Bank 0と同じ音色が入っています。

ノーマルボイス (GSボイス)

Bank Select MSB=バンクナンバー,
LSB=000

Instrument Group	Pgm #	Bank 0	EL	Bank 17	EL	Bank 18	EL	Bank 19	EL	Bank 24	EL	Bank 25	EL
Reed	65	SprnoSax	1										
	66	Alto Sax	1										
	67	TnrSax 2	1										
	68	Bari.Sax	1										
	69	Oboe	2										
	70	Eng.Horn	1										
	71	Bassoon	1										
	72	Clarinet	1										
Pipe	73	Piccolo	1										
	74	Flute	1										
	75	Recorder	1										
	76	PanFlute	1										
	77	Bottle	2										
	78	Shakhchi	2										
	79	Whistle	1										
	80	Ocarina	1										
Synth Lead	81	SquareLd	2										
	82	Saw.Lead	2										
	83	CalliopLd	2										
	84	Chiff Ld	2										
	85	CharanLd	2										
	86	Voice Ld	2										
	87	Fifth Ld	2										
	88	Bass &Ld	2										
Synth Pad	89	NewAgePd	2										
	90	Warm Pad	2										
	91	PolySyPd	2										
	92	ChoirPad	2										
	93	BowedPad	2										
	94	MetalPad	2										
	95	Halo Pad	2										
	96	SweepPad	2										
Synth Effects	97	Rain	2										
	98	SoundTrk	2										
	99	Crystal	2	AirBells	2	BellHarp	2	Gamelmba	2				
	100	Atmosphr	2										
	101	Bright	2										
	102	Goblins	2										
	103	Echoes	2										
	104	Sci-Fi	2										
Ethnic	105	Sitar	1										
	106	Banjo	1							Oud	2		
	107	Shamisen	1										
	108	Koto	1										
	109	Kalimba	1										
	110	Bagpipe	2										
	111	Fiddle	1										
	112	Shanai	1										
Percussive	113	TnklBell	2										
	114	Agogo	2										
	115	SteelDrm	2										
	116	WoodBlok	1										
	117	TaikoDrm	1										
	118	MelodTom	2										
	119	Syn.Drum	1										
	120	RevCymb1	1										
Sound Effects	121	FretNoiz	2										
	122	BrthNoiz	2										
	123	Seashore	2										
	124	Tweet	2										
	125	Telephone	1										
	126	Helicptr	1										
	127	Applause	1										
	128	Gunshot	1										

 Bank 0と同じ音色が入っています。

Bank Select MSB=バンクナンバー,
LSB=000

Instrument Group	Pgm #	Bank 0	EL	Bank 26	EL	Bank 32	EL	Bank 33	EL	Bank 40	EL	Bank 126	EL	Bank 127	EL
Reed	65	SprnoSax	1											a.bass 1	1
	66	Alto Sax	1											a.bass 2	1
	67	TnrSax 2	1											e.bass 1	1
	68	Bari.Sax	1											e.bass 2	1
	69	Oboe	2											slapbas1	1
	70	Eng.Horn	1											slapbas2	1
	71	Bassoon	1											fretles1	1
	72	Clarinet	1											fretles2	1
Pipe	73	Piccolo	1											flute1	1
	74	Flute	1											flute2	1
	75	Recorder	1											piccolo1	1
	76	PanFlute	1											piccolo2	2
	77	Bottle	2											recorder	1
	78	Shakhchi	2											panpipes	2
	79	Whistle	1											sax1	2
	80	Ocarina	1											sax2	1
Synth Lead	81	SquareLd	2											sax3	1
	82	Saw.Lead	2											sax4	1
	83	CaliopLd	2											clarint1	1
	84	Chiff Ld	2											clarint2	1
	85	CharanLd	2											oboe	1
	86	Voice Ld	2											eng.horn	1
	87	Fifth Ld	2											bassoon	1
	88	Bass &Ld	2											harmnica	1
Synth Pad	89	NewAgePd	2											trumpet1	1
	90	Warm Pad	2											trumpet2	1
	91	PolySyPd	2											trmbone1	2
	92	ChoirPad	2											trmbone2	2
	93	BowedPad	2											fr.horn1	1
	94	MetalPad	2											fr.horn2	2
	95	Halo Pad	2											tuba	2
	96	SweepPad	2											brssect1	1
Synth Effects	97	Rain	2											brssect2	2
	98	SoundTrk	2											vibe1	1
	99	Crystal	2											vibe2	1
	100	Atmosphr	2											symallet	1
	101	Bright	2											maletwin	2
	102	Goblins	2											glocken	2
	103	Echoes	2											tubulbel	1
	104	Sci-Fi	2											xylophen	1
Ethnic	105	Sitar	1											marimba	2
	106	Banjo	1											koto	1
	107	Shamisen	1											sho	2
	108	Koto	1											shakhchi	2
	109	Kalimba	1											whistle1	2
	110	Bagpipe	2											whistle2	1
	111	Fiddle	1											bottle	2
	112	Shanai	1											breath	2
Percussive	113	TnklBell	2											timpani	1
	114	Agogo	2											melotom	1
	115	SteelDrm	2											deepsnar	1
	116	WoodBlok	1											e.perc1	1
	117	TaikoDrm	1											e.perc2	1
	118	MelodTom	2											taiko	1
	119	Syn.Drum	1											taikorim	1
	120	RevCymb1	1											cymbal	2
Sound Effects	121	FretNoiz	2											castanet	1
	122	BrthNoiz	2											triangle	1
	123	Seashore	2											orchehit	1
	124	Tweet	2											telephone	1
	125	Telephone	1											bird	1
	126	Helicptr	1											jam	1
	127	Applause	1											efctwatr	2
	128	Gunshot	1											efctjngl	2

Bank 0と同じ音色が入っています。

ノーマルボイス(GM Level 2 ボイス)

MSB	121		121		121		121		121		121		121		121		121		121		121	
LSB	0		1		2		3		4		5		6		7		8		9			
Pgm	#																					
1	GrandPno	1	GrndPnoK	1	MelloGrP	1																
2	BritePno	1	BritPnoK	1																		
3	El.Grand	2	ElGrPnoK	2																		
4	HnkyTonk	2	HnkyTnkK	2																		
5	E.Piano1	2	Chor.EP1	2	VX El.P1	2	60sEl.P1	1														
6	E.Piano2	2	Chor.EP2	2	VX El.P2	2	DXLegend	2	DX Phase	2												
7	Harpsi.	1	Harpsi.3	2	Harpsi.K	1	Harpsi.2	2														
8	Clavi	2	PulseCiv	1																		
9	Celesta	1																				
10	Glocken	1																				
11	MusicBox	2																				
12	Vibes	1	Vibes K	1																		
13	Marimba	1	MarimbaK	1																		
14	Xylophon	1																				
15	TubulBel	1	ChrchBel	2	Carillon	2																
16	Dulcimer	1																				
17	DrawOrgn	1	DetDrwOr	2	60sDrOr1	2	DrawOrg2	2														
18	PercOrgn	1	DetPrcOr	2	PercOrg2	2																
19	RockOrgn	2																				
20	ChrchOrg	2	ChurOrg2	2	ChurOrg3	2																
21	ReedOrgn	1	Puff Org	2																		
22	Accordion	2	AccordIt	2																		
23	Harmnica	1																				
24	TangoAcid	2																				
25	NylonGtr	1	Ukulele	1	NylonGt3	2	NylonGt2	1														
26	SteelGtr	1	12StrGtr	2	Mandolin	2	Stl&Body	2														
27	Jazz Gtr	1	PdlSteel	1																		
28	CleanGtr	1	ChorusGt	2	MidT.Gtr	1																
29	Mute Gtr	1	FunkGtr1	2	FunkGtr2	2	Jazz Man	2														
30	Ovrdrive	1	Gt.Pinch	2																		
31	Dist.Gtr	1	FeedbkGt	2	DstRthmG	2																
32	GtrHarmo	1	GtFeedbk	1																		
33	Aco.Bass	1																				
34	FngrBass	1	FngrSlap	2																		
35	PickBass	1																				
36	Fretless	1																				
37	SlapBas1	1																				
38	SlapBas2	1																				
39	SynBass1	1	SynBa1Dk	1	AcidBass	1	Clv Bass	2	Hammer	2												
40	SynBass2	2	DX Bass	2	RubberBa	2	AtkPulse	1														
41	Violin	1	Slow Vln	1																		
42	Viola	1																				
43	Cello	1																				
44	Contrabs	1																				
45	Trem.Str	1																				
46	Pizz.Str	1																				
47	Harp	1	YangChin	2																		
48	Timpani	1																				
49	Strings1	1	Orchestr	2	60sStrng	2																
50	Strings2	1																				
51	Syn Str1	2	Syn Str3	2																		
52	Syn Str2	2																				
53	ChoirAah	1	Ch.Aahs2	2																		
54	VoiceOoh	1	VoiceHmn	1																		
55	SynVoice	1	AnaVoice	1																		
56	Orch.Hit	2	BassHit+	2	6th Hit	1	Euro Hit	1														
57	Trumpet	1	DrkTpSft	1																		
58	Trombone	1	Trmbone2	2	BrghtTrb	1																
59	Tuba	1																				
60	Mute Trp	1	MuteTrp2	2																		
61	Fr. Horn	2	FrHorn 2	2																		
62	BrssSect	1	BrssSec2	2																		
63	SynBrss1	2	SynBrss3	2	AnaBrss1	2	JumpBrss	2														
64	SynBrss2	1	SynBrss4	2	AnaBrss2	2																
65	SprnoSax	1																				
66	Alto Sax	1																				
67	TenorSax	1																				
68	Bari.Sax	1																				
69	Oboe	2																				
70	Eng.Horn	1																				
71	Bassoon	1																				
72	Clarinet	1																				
73	Piccolo	1																				
74	Flute	1																				
75	Recorder	1																				
76	PanFlute	1																				
77	Bottle	2																				
78	Shakhchi	2																				
79	Whistle	1																				
80	Ocarina	1																				
81	SquareLd	2	SquarLd2	1	SineLead	1																
82	Saw Ld	2	Saw Ld 2	1	Dr.Lead	2	DoublSaw	2	Seq Ana.	2												
83	CaliopLd	2																				

Bank LSB 0 と同じ

MSB	121		121		121		121		121		121		121		121		121		121		121	
LSB	0		1		2		3		4		5		6		7		8		9			
Pgm #																						
84	Chiff Ld	2																				
85	CharanLd	2	WireLead	2																		
86	Voice Ld	2																				
87	Fifth Ld	2																				
88	Bass&Ld	2	Soft Wrl	2																		
89	NewAgePd	2																				
90	Warm Pad	2	Sine Pad	2																		
91	PolySyPd	2																				
92	ChoirPad	2	Itopia	2																		
93	BowedPad	2																				
94	MetalPad	2																				
95	Halo Pad	2																				
96	SweepPad	2																				
97	Rain	2																				
98	SoundTrk	2																				
99	Crystal	2	SynMalet	1																		
100	Atmosphr	2																				
101	Bright	2																				
102	Goblins	2																				
103	Echoes	2	EchoBell	2	Echo Pan	2																
104	Sci-Fi	2																				
105	Sitar	1	Sitar 2	2																		
106	Banjo	1																				
107	Shamisen	1																				
108	Koto	1	Taisho-k	2																		
109	Kalimba	1																				
110	Bagpipe	2																				
111	Fiddle	1																				
112	Shanai	1																				
113	TnkiBell	2																				
114	Agogo	2																				
115	SteelDrm	2																				
116	Woodblok	1	Castanet	1																		
117	TaikoDrm	1	Gr.Cassa	1																		
118	MelodTom	2	Mel Tom2	1																		
119	Syn Drum	1	Ana Tom	1	ElecPerc	2																
120	RevCymb1	1																				
121	FretNoiz	2	CuttngNz	1	Str Slap	1																
122	BrthNoiz	2	Fl.KClk	1																		
123	Seashore	2	Shower	1	Thunder	1	Wind	1	Stream	2	Bubble	2										
124	Tweet	2	Dog	1	Horse	1	Tweet 2	1														
125	Telephone	1	PhonCall	1	DoorSqek	1	DoorSlam	1	ScratchC	1	WindChim	1										
126	Helicptr	1	CarElgnt	1	CarTSgel	1	Car Pass	1	CarCrash	1	Siren	2	Train	1	JetPlane	2	Starship	2	Burst	2		
127	Applause	1	Laugh	1	Scream	1	Punch	1	Heart	1	Footstep	1										
128	Gunshot	1	MchinGun	1	LaserGun	2	Xplosion	2														

■ : Bank LSB 0 と同じ

ドラムボイス (XGドラムボイス)

Bank Select MSB= バンクナンバー,
LSB=000

Bank	127				127	127	127	127	127
Program #	1				2	9	17	25	26
Note#	Note	Key off	Alternate assign	Standard Kit	Standard2 Kit	Room Kit	Rock Kit	Electro Kit	Analog Kit
13	C# -1		3	Surdo Mute					
14	D -1		3	Surdo Open					
15	D# -1			Hi Q					
16	E -1			Whip Slap					
17	F -1		4	Scratch Push					
18	F# -1		4	Scratch Pull					
19	G -1			Finger Snap					
20	G# -1			Click Noise					
21	A -1			Metronome Click					
22	A# -1			Metronome Bell					
23	B -1			Seq Click L					
24	C 0			Seq Click H					
25	C# 0			Brush Tap					
26	D 0	O		Brush Swirl L					
27	D# 0			Brush Slap					
28	E 0	O		Brush Swirl H				Reverse Cymbal	Reverse Cymbal
29	F 0	O		Snare Roll	Snare Roll 2				
30	F# 0			Castanet				Hi Q	Hi Q
31	G 0			Snare L	Snare L 2		SD Rock M	Snare M	SD Rock H
32	G# 0			Sticks					
33	A 0			Bass Drum L			Bass Drum M	Bass Drum H 4	Bass Drum M
34	A# 0			Open Rim Shot	Open Rim Shot 2				
35	B 0			Bass Drum M	Bass Drum M 2		Bass Drum H 3	BD Rock	BD Analog L
36	C 1			Bass Drum H	Bass Drum H 2			BD Gate	BD Analog H
37	C# 1			Side Stick					Analog Side Stick
38	D 1			Snare M	Snare M 2	SD Room L	SD Rock	SD Rock L	Analog Snare L
39	D# 1			Hand Clap					
40	E 1			Snare H	Snare H 2	SD Room H	SD Rock Rim	SD Rock H	Analog Snare H
41	F 1			Floor Tom L		Room Tom 1	Rock Tom 1	E Tom 1	Analog Tom 1
42	F# 1	1		Hi-Hat Closed					Analog HH Closed 1
43	G 1			Floor Tom H		Room Tom 2	Rock Tom 2	E Tom 2	Analog Tom 2
44	G# 1	1		Hi-Hat Pedal					Analog HH Closed 2
45	A 1			Low Tom		Room Tom 3	Rock Tom 3	E Tom 3	Analog Tom 3
46	A# 1	1		Hi-Hat Open					Analog HH Open
47	B 1			Mid Tom L		Room Tom 4	Rock Tom 4	E Tom 4	Analog Tom 4
48	C 2			Mid Tom H		Room Tom 5	Rock Tom 5	E Tom 5	Analog Tom 5
49	C# 2			Crash Cymbal 1					Analog Cymbal
50	D 2			High Tom		Room Tom 6	Rock Tom 6	E Tom 6	Analog Tom 6
51	D# 2			Ride Cymbal 1					
52	E 2			Chinese Cymbal					
53	F 2			Ride Cymbal Cup					
54	F# 2			Tambourine					
55	G 2			Splash Cymbal					
56	G# 2			Cowbell					Analog Cowbell
57	A 2			Crash Cymbal 2					
58	A# 2			Vibraslap					
59	B 2			Ride Cymbal 2					
60	C 3			Bongo H					
61	C# 3			Bongo L					
62	D 3			Conga H Mute					Analog Conga H
63	D# 3			Conga H Open					Analog Conga M
64	E 3			Conga L					Analog Conga L
65	F 3			Timbale H					
66	F# 3			Timbale L					
67	G 3			Agogo H					
68	G# 3			Agogo L					
69	A 3			Cabasa					
70	A# 3			Maracas					Analog Maracas
71	B 3	O		Samba Whistle H					
72	C 4	O		Samba Whistle L					
73	C# 4			Guiro Short					
74	D 4	O		Guiro Long					
75	D# 4			Claves					Analog Claves
76	E 4			Wood Block H					
77	F 4			Wood Block L					
78	F# 4			Cuica Mute				Scratch Push	Scratch Push
79	G 4			Cuica Open				Scratch Pull	Scratch Pull
80	G# 4	2		Triangle Mute					
81	A 4	2		Triangle Open					
82	A# 4			Shaker					
83	B 4			Jingle Bell					
84	C 5			Bell Tree					
85	C# 5								
86	D 5								
87	D# 5								
88	E 5								
89	F 5								
90	F# 5								
91	G 5								

□ : Standard Kitと同じ

Bank Select MSB= バンクナンバー,
LSB=000

Bank					127	127	127	126	126
Program #					33	41	49	1	2
Note#	Note	Key off	Alternate assign	Jazz Kit	Brush Kit	Classic Kit	SFX 1	SFX 2	
13	C# -1		3						
14	D -1		3						
15	D# -1								
16	E -1								
17	F -1		4						
18	F# -1		4						
19	G -1								
20	G# -1								
21	A -1								
22	A# -1								
23	B -1								
24	C 0								
25	C# 0								
26	D 0	O							
27	D# 0								
28	E 0	O							
29	F 0	O							
30	F# 0								
31	G 0				Brush Slap L				
32	G# 0								
33	A 0					Bass Drum L2			
34	A# 0								
35	B 0					Gran Cassa			
36	C 1			BD Jazz	BD Soft	Gran Cassa Mute	Guitar Cutting Noise	Dial Tone	
37	C# 1						Guitar Cutting Noise 2	Door Creaking	
38	D 1				Brush Slap	Marching Sn M		Door Slam	
39	D# 1						String Slap	Scratch	
40	E 1				Brush Tap	Marching Sn H		Scratch 2	
41	F 1			Jazz Tom 1	Brush Tom 1	Jazz Tom 1		Windchime	
42	F# 1	1						Telephone Ring2	
43	G 1			Jazz Tom 2	Brush Tom 2	Jazz Tom 2			
44	G# 1	1							
45	A 1			Jazz Tom 3	Brush Tom 3	Jazz Tom 3			
46	A# 1	1							
47	B 1			Jazz Tom 4	Brush Tom 4	Jazz Tom 4			
48	C 2			Jazz Tom 5	Brush Tom 5	Jazz Tom 5			
49	C# 2					Hand Cym.Open L			
50	D 2			Jazz Tom 6	Brush Tom 6	Jazz Tom 6			
51	D# 2					Hand Cym.Closed L			
52	E 2						FL.Key Click	Engine Start	
53	F 2							Tire Screech	
54	F# 2							Car Passing	
55	G 2							Crash	
56	G# 2							Siren	
57	A 2					Hand Cym.Open H		Train	
58	A# 2							Jetplane	
59	B 2					Hand Cym.Closed H		Starship	
60	C 3							Burst Noise	
61	C# 3							Coaster	
62	D 3							SvMarine	
63	D# 3								
64	E 3								
65	F 3								
66	F# 3								
67	G 3								
68	G# 3						Rain	Laughing	
69	A 3						Thunder	Screaming	
70	A# 3						Wind	Punch	
71	B 3	O					Stream	Heartbeat	
72	C 4	O					Bubble	Footsteps	
73	C# 4						Feed		
74	D 4	O							
75	D# 4								
76	E 4								
77	F 4								
78	F# 4								
79	G 4								
80	G# 4	2							
81	A 4	2							
82	A# 4								
83	B 4								
84	C 5						Dog	Machine Gun	
85	C# 5						Horse Gallop	Laser Gun	
86	D 5						Bird 2	Explosion	
87	D# 5							FireWork	
88	E 5								
89	F 5								
90	F# 5						Gorst		
91	G 5						Maou		

Standard Kitと同じ

音はなりません。

ドラムボイス (GSDドラムボイス)

Program #	1	9	17	25	26	33	41	49	57	128		
Note#	Note	Alternate assign	Standard Kit	Room Kit	Power Kit	Electro Kit	Analog Kit	Jazz Kit	Brush Kit	Orchestra Kit	SFX Set	C/M Kit
25	C# 0		Snare Roll									
26	D 0		Finger Snap									
27	D# 0		Hi Q									
28	E 0		Whip Slap							Hi-Hat Closed		
29	F 0	7	Scratch Push							Hi-Hat Pedal		
30	F# 0	7	Scratch Pull							Hi-Hat Open		
31	G 0		Sticks							Ride Cymbal 1		
32	G# 0		Click Noise									
33	A 0		Metronome Click									
34	A# 0		Metronome Bell									
35	B 0		Bass Drum M							BD Jazz		
36	C 1		Bass Drum H		BD Power	BD Electronic	BD Analog H	BD Jazz	BD Soft	Gran Cassa		
37	C# 1		Side Stick				Analog Side Stick					
38	D 1		Snare M		SD Power	SD Electronic	Analog Snare L		Brush Tap	Concert SD		
39	D# 1		Hand Clap						Brush Slap	Castanet	High-Q	
40	E 1		Snare H		SD Power				Brush Swirl	Concert SD	Slap	SD Electro
41	F 1		Floor Tom L	Room Tom 1	Room Tom 1	E Tom 1	Analog Tom 1	Jazz Tom 1	Jazz Tom 1	Timpani F	Scratch Push	
42	F# 1	1	Hi-Hat Closed				Analog HH Closed 1			Timpani F#	Scratch Pull	
43	G 1		Floor Tom H	Room Tom 2	Room Tom 2	E Tom 2	Analog Tom 2	Jazz Tom 2	Jazz Tom 2	Timpani G	Sticks	
44	G# 1	1	Hi-Hat Pedal				Analog HH Closed 2			Timpani G#	Square Click	Hi-Hat Open 1
45	A 1		Low Tom	Room Tom 3	Room Tom 3	E Tom 3	Analog Tom 3	Jazz Tom 3	Jazz Tom 3	Timpani A	Metronome Click	
46	A# 1	1	Hi-Hat Open				Analog HH Open			Timpani A#	Metronome Bell	Hi-Hat Open 2
47	B 1		Mid Tom L	Room Tom 4	Room Tom 4	E Tom 4	Analog Tom 4	Jazz Tom 4	Jazz Tom 4	Timpani B	Guitar Fret Noise	
48	C 2		Mid Tom H	Room Tom 5	Room Tom 5	E Tom 5	Analog Tom 5	Jazz Tom 5	Jazz Tom 5	Timpani C	Guitar Cutting Down	
49	C# 2		Crash Cymbal 1				Analog Cymbal			Timpani C#	Guitar Cutting Up	
50	D 2		High Tom	Room Tom 6	Room Tom 6	E Tom 6	Analog Tom 6	Jazz Tom 6	Jazz Tom 6	Timpani D	Ac Bass Slap	
51	D# 2		Ride Cymbal 1							Timpani D#	FL Key Click	
52	E 2		Chinese Cymbal			Reverse Cymbal				Timpani E	Laughing	
53	F 2		Ride Cymbal Cup							Timpani F	Screaming	
54	F# 2		Tambourine								Punch	
55	G 2		Splash Cymbal								Heartbeat	
56	G# 2		Cowbell				Analog Cowbell				Footsteps 1	
57	A 2		Crash Cymbal 2							Hand Cym.1	Footsteps 2	
58	A# 2		Vibraslap								Applause	
59	B 2		Ride Cymbal 2							Hand Cym.2	Door Creaking	
60	C 3		Bongo H								Door Slam	
61	C# 3		Bongo L								Scratch	
62	D 3		Conga H Mute				Analog Conga H				Windchime	
63	D# 3		Conga H Open				Analog Conga M				Engine Start	
64	E 3		Conga L				Analog Conga L				Tire Screech	
65	F 3		Timbale H								Car Passing	
66	F# 3		Timbale L								Crash	
67	G 3		Agogo H								Siren	
68	G# 3		Agogo L								Train	
69	A 3		Cabasa								Jetplane	
70	A# 3		Maracas				Analog Maracas				Helicopter	
71	B 3	2	Samba Whistle H								Starship	
72	C 4	2	Samba Whistle L								Gunshot	
73	C# 4	3	Guiro Short								Machine Gun	Vibraslap
74	D 4	3	Guiro Long								Laser Gun	
75	D# 4		Claves				Analog Claves				Explosion	
76	E 4		Wood Block H								Dog	Laughing
77	F 4		Wood Block L								Horse Gallop	Screaming
78	F# 4	4	Cuica Mute								Bird Tweet	Punch
79	G 4	4	Cuica Open								Rain	Heartbeat
80	G# 4	5	Triangle Mute								Thunder	Footsteps 1
81	A 4	5	Triangle Open								Wind	Footsteps 2
82	A# 4		Shaker								Seashore	Applause
83	B 4		Jingle Bell								Stream	Door Creaking

Program #			1	9	17	25	26	33	41	49	57	128
Note#	Note	Alternate assign	Standard Kit	Room Kit	Power Kit	Electro Kit	Analog Kit	Jazz Kit	Brush Kit	Orchestra Kit	SFX Set	C/M Kit
84	C 5		Bell Tree								Bubble	Door Slam
85	C# 5		Castanet									Scratch
86	D 5	6	Surdo Mute									Windchime
87	D# 5	6	Surdo Open									Engine Start
88	E 5									Applause		Tire Screech
89	F 5											Car Passing
90	F# 5											Crash
91	G 5											Siren
92	G# 5											Train
93	A 5											Jetplain
94	A# 5											Helicopter
95	B 5											Starship
96	C 6											Gunshot
97	C# 6											Machine Gun
98	D 6											Laser Gun
99	D# 6											Explosion
100	E 6											Deg
101	F 6											Horse Gallop
102	F# 6											Bird Tweet
103	G 6											Rain
104	G# 6											Thunder
105	A 6											Wind
106	A# 6											Seashore
107	B 6											Stream
108	C 7											Bubble

□ : Standard Kit と同じ

■ : 音はなりません

ドラムボイス (GM Level 2 ドラムボイス)

Bank Select MSB= バンクナンバー,
LSB=000

MSB	120		120		120		120		120		120		120		120		
LSB	0		0		0		0		0		0		0		0		
Pgm#	1		9		17		25		26		33		41		49		
Note#	GM Stand	E	GM Room	E	GM Power	E	GM Elctr	E	GM Analog	E	GM Jazz	E	GM Brush	E	GM Orche	E	GM SFX
13																	
14																	
15																	
16																	
17																	
18																	
19																	
20																	
21																	
22																	
23																	
24																	
25																	
26																	
27	Hi Q	1													HatCloseOrch	1	
28	Whip Slap	1													HatPedalOrch	1	
29	Scratch Push	1													HatOpen Orch	1	
30	Scratch Pull	1													RideCym1Orch	1	
31	Sticks	1															
32	Click Noise	1															
33	Mtrnm Click	1															
34	Mtrnm Bell	1															
35	Kick Tight	1									KickTJazz	1	KickTJazz	1	Kick Orch	1	
36	Kick	1			Kick Power	1	Kick El	1	Kick Analog	1	Kick Jazz	1	Kick Jazz	1	GranCassa Or	1	
37	Side Stick	1							SideStickAn	1							
38	Snare	1			Snare Power	1	Snare El	1	SnareAnalog	1			Brush Tap GM	1	Band Snare	1	
39	Hand Clap	1											BrushSlap GM	1	Castanet 2	1	Hi Q
40	Snare Tight	1					Snare EL 2	1					BrushSwirlGM	1	Band Snare	1	Whip Slap
41	Floor Tom L	1	Tom Room 1	1	Tom Rock 1	1	TomElectro 1	1	Tom Analog 1	1					Timpani F	1	Scratch Push
42	Hi-HatClosed	1							HatCloseAnlg	1					Timpani F#	1	Scratch Pull
43	Floor Tom H	1	Tom Room 2	1	Tom Rock 2	1	TomElectro 2	1	Tom Analog 2	1					Timpani G	1	Sticks
44	Hi-Hat Pedal	1							HatCloseAn 2	1					Timpani G#	1	Click Noise
45	Low Tom	1	Tom Room 3	1	Tom Rock 3	1	TomElectro 3	1	Tom Analog 3	1					Timpani A	1	Mtrnm Click
46	Hi-Hat Open	1							HatOpen Anlg	1					Timpani A#	1	Mtrnm Bell
47	Mid Tom L	1	Tom Room 4	1	Tom Rock 4	1	TomElectro 4	1	Tom Analog 4	1					Timpani B	1	Fret Noise
48	Mid Tom H	1	Tom Room 5	1	Tom Rock 5	1	TomElectro 5	1	Tom Analog 5	1					Timpani C	1	CuttingNoizH
49	CrashCymbal1	1							Crash Analog	1					Timpani C#	1	CuttingNoizL
50	High Tom	1	Tom Room 6	1	Tom Rock 6	1	TomElectro 6	1	Tom Analog 6	1					Timpani D	1	String Slap
51	RideCymbal 1	1													Timpani D#	1	Fl.Key Click
52	Chinese Cym	1					ReversCymbal	1							Timpani E	1	Laugh
53	Ride Cym Cup	1													Timpani F'	1	Scream
54	Tambourine	1															Punch
55	SplashCymbal	1															Heartbeat
56	Cowbell	1							Cowbell Anlg	1							Footsteps 1
57	CrashCymbal2	1													ConcertCym 2	1	Footsteps 2
58	Vibraslap	1															Applause
59	RideCymbal 2	1													ConcertCym 1	1	Door Squeak
60	Bongo H	1															Door Slam
61	Bongo L	1															Scratch Cut
62	Conga H Mute	1							Conga Anlg H	1							Wind Chime
63	Conga H Open	1							Conga Anlg M	1							Ignition
64	Conga L	1							Conga Anlg L	1							Squeal
65	Timbale H	1															Exhaust
66	Timbale L	1															Crash
67	Agogo H	1															Siren
68	Agogo L	1															Train
69	Cabasa	1															Jet Plane
70	Maracas	1							Maracas 2	1							Helicopter
71	SambaWhstlSh	1															Starship
72	SambaWhstlLg	1															Gunshot
73	Guiro Short	1															Machine Gun
74	Guiro Long	1															Laser Gun
75	Claves	1							Claves 2	1							Explosion
76	Wood Block H	1															Dog
77	Wood Block L	1															Horse
78	Cuica Mute	1															Bird Tweet
79	Cuica Open	1															Shower
80	TriangleMute	1															Thunder
81	TriangleOpen	1															Wind
82	Shaker	1															Seashore
83	Jingle Bells	1															Stream
84	Bell Tree	1															Bubble
85	Castanet	1															
86	Surdo Mute	1															
87	Surdo Open	1															
88															Applause	1	
89																	
90																	
91																	

■ : No sound ■ : GM Standと同じ E : エLEMENT数

エフェクトタイプリスト

REVERB

No.	Exclusive		Effect Type	特徴
	msb	lsb		
0	0	0	NO EFFECT	エフェクトをOFFにします。
1	1	0	HALL1	ホールでの響きをシミュレートしたリバーブです。
2	1	1	HALL2	
3	2	0	ROOM1	部屋の響きをシミュレートしたリバーブです。
4	2	1	ROOM2	
5	2	2	ROOM3	
6	3	0	STAGE1	ソコ楽器に適したリバーブです。
7	3	1	STAGE2	
8	4	0	PLATE	鉄板リバーブをシミュレートしたリバーブです。
9	10	0	WHITE ROOM	若干のイニシャルディレイを持った独特のショートリバーブです。
10	11	0	TUNNEL	左右に広がった高状の空間のシミュレートです。
11	13	0	BASEMENT	若干のイニシャルディレイの後に、独特の響きを持ったリバーブです。

CHORUS

No.	Exclusive		Effect Type	特徴
	msb	lsb		
0	0	0	NO EFFECT	エフェクトをOFFにします。
1	41	0	CHORUS1	一般的なコーラスプログラムです。音を自然に広げます。
2	41	1	CHORUS2	
3	41	2	CHORUS3	
4	41	8	CHORUS4	ステレオ入力のコーラスです。パートで設定したPANがエフェクト音にも有効となります。
5	42	0	CELESTE1	3相のLFOにより、音にうねりと広がりを与えるプログラムです。
6	42	1	CELESTE2	
7	42	2	CELESTE3	
8	42	8	CELESTE4	ステレオ入力のセレステです。パートで設定したPANがエフェクト音にも有効となります。
9	43	0	FLANGER1	ジェットサウンドを与えます。
10	43	1	FLANGER2	
11	43	8	FLANGER3	

VARIATION

No.	Exclusive		Effect Type	特徴
	msb	lsb		
0	0	0	NO EFFECT	エフェクトをOFFにします。
1	1	0	HALL1	ホールでの響きをシミュレートしたリバーブです。
2	1	1	HALL2	
3	2	0	ROOM1	部屋の響きをシミュレートしたリバーブです。
4	2	1	ROOM2	
5	2	2	ROOM3	
6	3	0	STAGE1	ソコ楽器に適したリバーブです。
7	3	1	STAGE2	
8	4	0	PLATE	鉄板リバーブをシミュレートしたリバーブです。
9	5	0	DELAY L,C,R	L,R,C(center)の3本のディレイ音を発生するプログラムです。
10	6	0	DELAY L,R	L,R2本のディレイ音を発生するプログラムです。2本のフィードバックディレイを持っています。
11	7	0	ECHO	L,R2本のディレイとL,R独立のフィードバックディレイを持っています。
12	8	0	CROSS DELAY	2本のディレイのフィードバックをクロスさせたプログラムです。
13	9	0	ER1	リバーブの初期反射音のみを取り出したエフェクトです。
14	9	1	ER2	
15	A	0	GATE REVERB	ゲートリバーブをシミュレートしたものです。
16	B	0	REVERSE GATE	ゲートリバーブの逆再生をシミュレートしたプログラムです。
17	14	0	KARAOKE 1	カラオケ用のエコーと同じ仕組みのフィードバック付きのディレイです。
18	14	1	KARAOKE 2	
19	14	2	KARAOKE 3	
20	41	0	CHORUS1	一般的なコーラスプログラムです。音を自然に広げます。
21	41	1	CHORUS2	
22	41	2	CHORUS3	
23	41	8	CHORUS4	ステレオ入力のコーラスです。
24	42	0	CELESTE1	3相のLFOにより、音にうねりと広がりを与えるプログラムです。
25	42	1	CELESTE2	
26	42	2	CELESTE3	
27	42	8	CELESTE4	ステレオ入力のセレステです。
28	43	0	FLANGER1	ジェットサウンドを与えます。
29	43	1	FLANGER2	
30	43	8	FLANGER3	
31	44	0	SYMPHONIC	CELESTEの変調をより多重化したものです。
32	45	0	ROTARY SPEAKER	回転スピーカーをシミュレートしたものです。AC1(アサインナルコントローラー1)などで、回転スピードをコントロールできます。
33	46	0	TREMOLO	音量を周期的に変化させるエフェクトです。
34	47	0	AUTO PAN	音像を左右、前後に周期的に移動させるプログラムです。
35	48	0	PHASER1	位相(フェイズ)を周期的に変化させ音にうねりを持たせます。
36	48	8	PHASER2	ステレオ入力のフェーザーです。
37	49	0	DISTORTION	音にエッジの効いた歪みを与えます。
38	4A	0	OVER DRIVE	音にマイルドな歪みを与えます。
39	4B	0	AMP SIMULATOR	ギターアンプをシミュレートしたものです。
40	4C	0	3BAND EQ (MONO)	LOW, MID, HIGHのイコライジングが可能なMONO EQです。
41	4D	0	2BAND EQ (STEREO)	LOW, HIGHのイコライジングが可能なSTEREO EQです。ドラムパートに最適です。
42	4E	0	AUTO WAH (LFO)	ワウフィルターの中心周波数を周期的に変化させます。AC1などでベダルワウとしても使えます。
43	40	0	THRU	エフェクトをかけずにバイパスします。

MIDIインプリメンテーションチャート

YAMAHA [Software Synthesizer]
Model S-YXG50 MIDI Implementation Chart

Date :11-APR-2003
Version : 1.1

Function...	Transmitted	Recognized	Remarks
Basic Channel	Default X Changed X	1 - 16 1 - 16	
Mode	Default X Messages X Altered *****	3 3, 4 (m=1) *2 X	
Note Number : True voice	X *****	0 - 127 0 - 127	
Velocity	Note ON X Note OFF X	O 9nH, v=1-127 X	
After Touch	Key's X Ch's X	O *1 O *1	
Pitch Bend	X	O 0-24 semi *1	
Control Change	0,32 X 1,5,7,10,11 X 6,38 X 64-67 X 71-74 X 84 X 91,93,94 X 96-97 X 98-99 X 100-101 X	O *1 O *1 O *1 O O O O *1 O *1 O *1	Bank Select Data Entry Sound Controller Portamento Cntrl Effect Depth RPN Inc,Dec NRPN LSB,MSB RPN LSB,MSB
Prog Change : True #	X *****	O 0 - 127	
System Exclusive	X	O *3	
Common : Song Pos. : Song Sel. : Tune	X X X	X X X	
System : Clock Real Time : Commands	X X	X X	
Aux : All Sound Off : Reset All Cntrls : Local ON/OFF Mes- : All Notes OFF sages: Active Sense : Reset	X X X X X X	O (120) O (121) X O (123-127) X X	
Notes: *1 receive if switch is on. *2 m is always treated as "1" regardless of its value. *3 transmit/receive if exclusive switch is on.			

Mode 1 : OMNI ON , POLY
Mode 3 : OMNI OFF, POLY

Mode 2 : OMNI ON ,MONO
Mode 4 : OMNI OFF,MONO

O : Yes
X : No